

Servicing headlights

Removing and installing headlights

Removing

Note:

Apply masking tape to bumper in area around headlight to prevent damage to the paintwork.

- → Unscrew bolt -1- (1.5 Nm) and detach trim strip -2-.
- Unscrew the four bolts -3- (top bolts 6 Nm, bottom bolts 3.5 Nm) and then pull headlight slightly forward out of vehicle.
- Detach connectors at headlight.
- Take headlight to front out of vehicle.

Installing

- Always align headlight flush with contours of body (uniform gap all round), and secure in position.
- Installation is performed in the reverse sequence.
- Adjust headlights after installing => Page [94-11](#).

