


Removing and installing door trim (front)

Special tools and workshop equipment required

t Wedges -T10383-

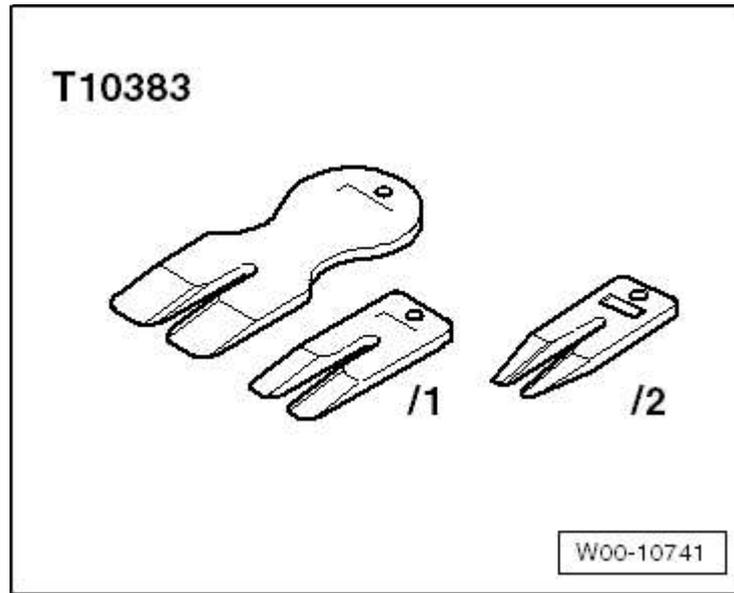

t Removal wedge -3409-


Removing

- Switch off ignition and remove ignition key.
- Remove trim panel → [Chapter](#).




Door trim (driver side):

- Remove mid-range loudspeaker trim → [Chapter](#).
- Unclip cover -1- from door trim - arrow- using removal wedge -3409-

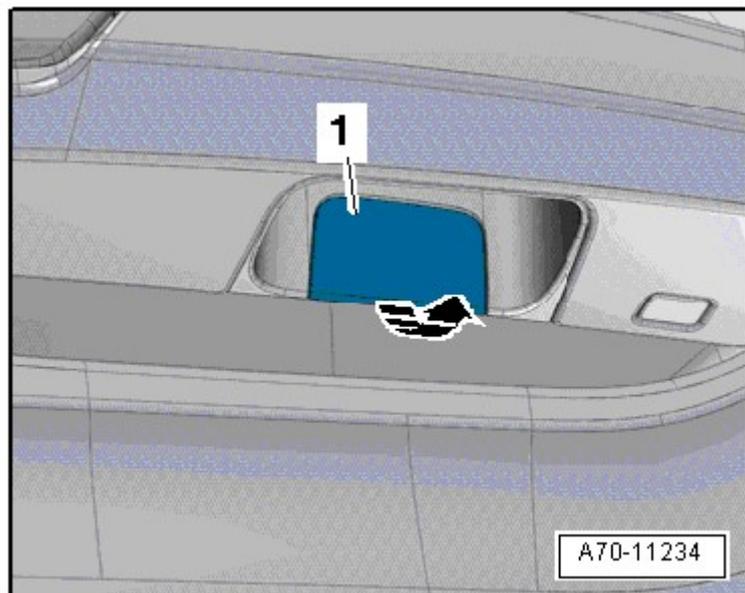


– Remove bolts -1 ... 4-

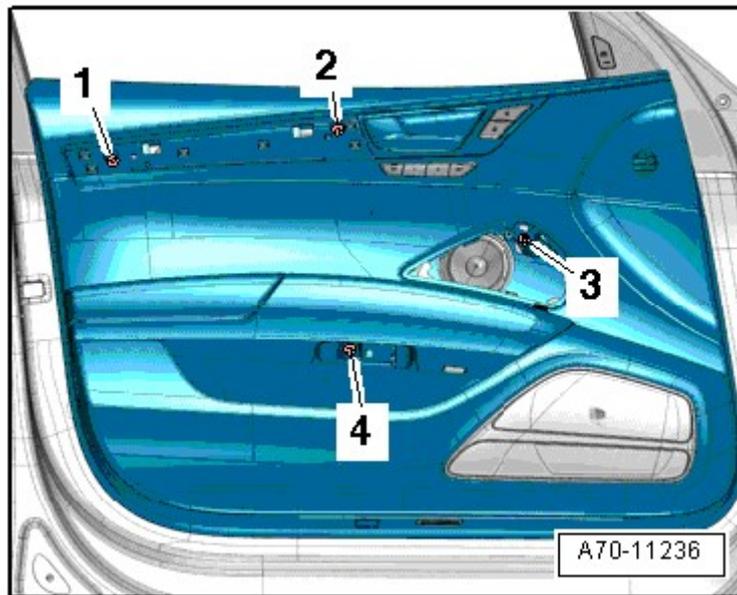



A two-piece clip is fitted at the bottom centre of the door trim. This clip must be released before unfastening the seven “normal” one-piece clips.

Press firmly against embossed area of door trim (at bottom next to entry light) -arrow 1- with your thumb to release two-piece clip - arrow 2-

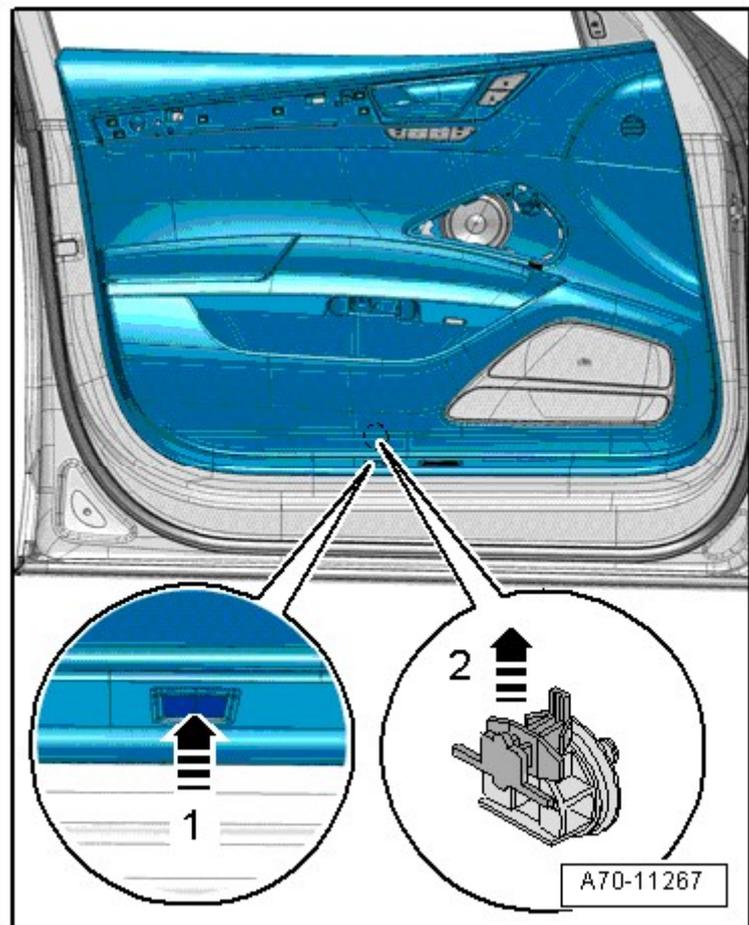

Door trim (front passenger side):

– Unclip cover -1- from door trim - arrow- using removal wedge -3409-

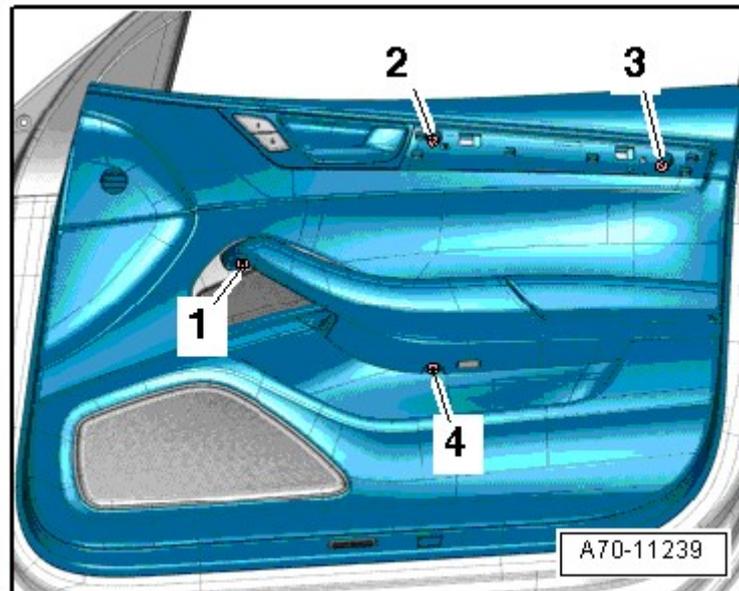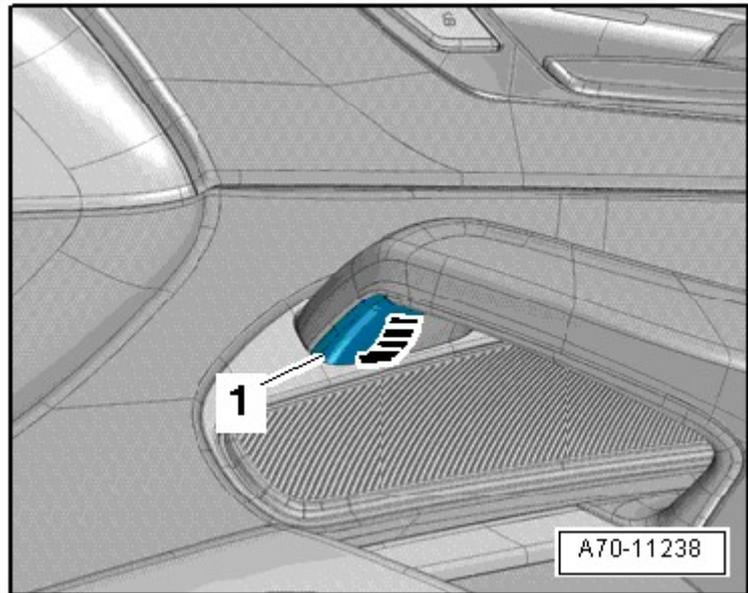


– Remove bolts -1 ... 4-.




A two-piece clip is fitted at the bottom centre of the door trim. This clip must be released before unfastening the seven “normal” one-piece clips.

Press firmly against embossed area of door trim (at bottom next to entry light) -arrow 1- with your thumb to release two-piece clip - arrow 2-.

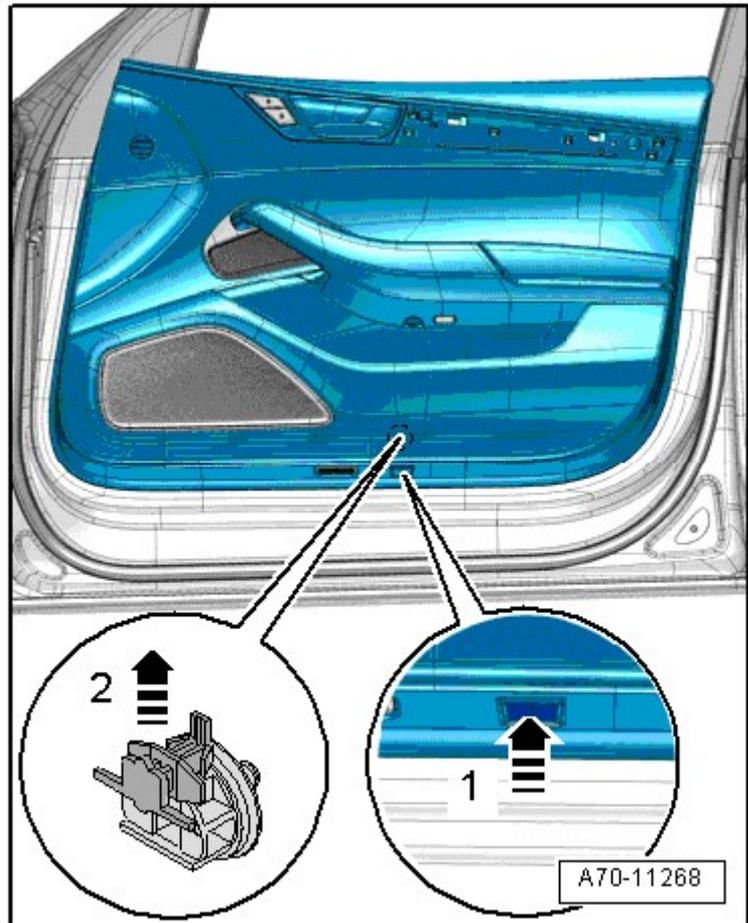


Both sides of vehicle (continued):

Starting in bottom rear corner, use wedge -T10383- to unclip door trim from door. To do so, insert wedge between door trim and door in area of retaining clips.

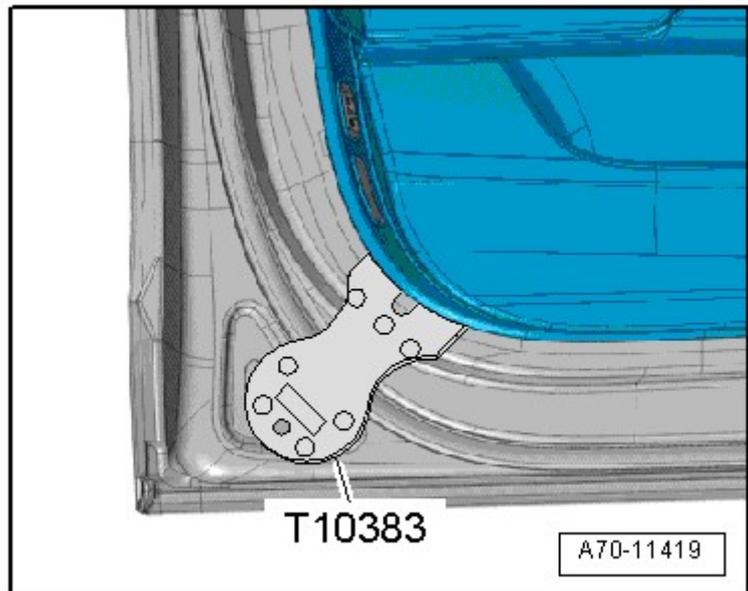


1 Position of retaining clips -arrows-


Disengage door trim from door at top of window slot. To do so, pull door trim upwards.

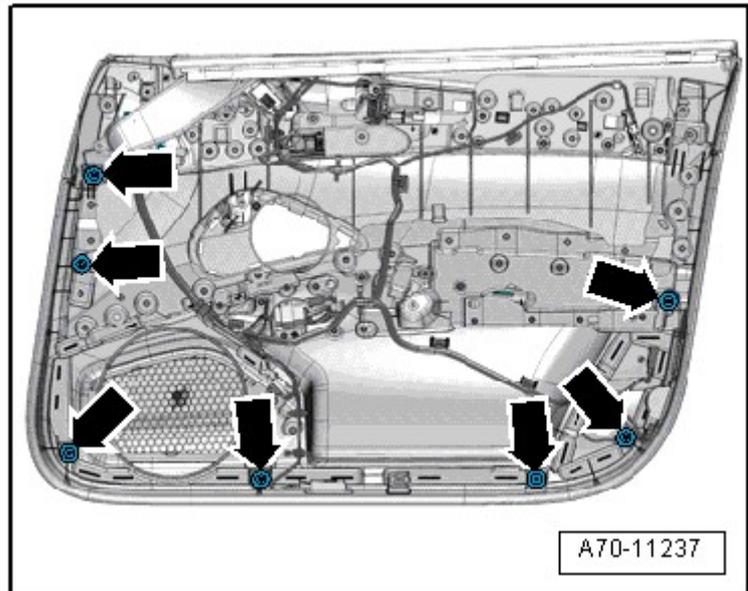

- Carefully disengage catch -3- at cable support bracket -1-.
- Pull Bowden cable -2- for interior door handle out of cable support bracket in direction of -arrow-.
- Disengage end of cable -4- at interior door handle.

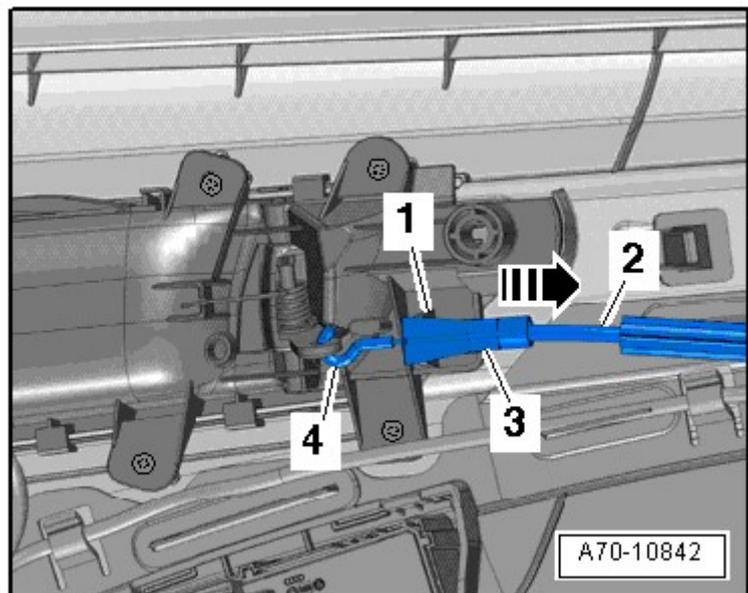


- To unplug electrical connector, press catch -1-, turn retaining bracket in direction of -arrow- and unplug connector.
- Detach door trim.

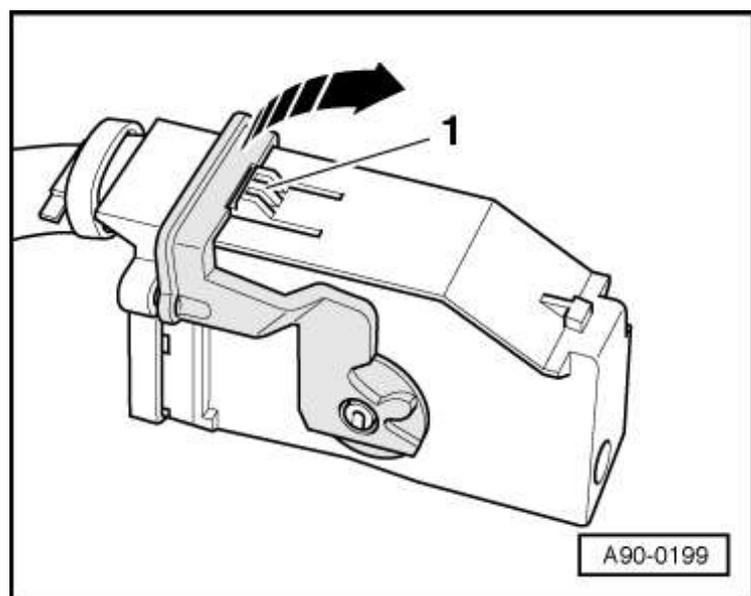


Installing

- Renew damaged two-piece clip; to do so, disengage bottom part -1- from door (working from back of door) and remove top part -2- from door trim.
- Assemble two-piece clip -arrow- and insert in door trim.

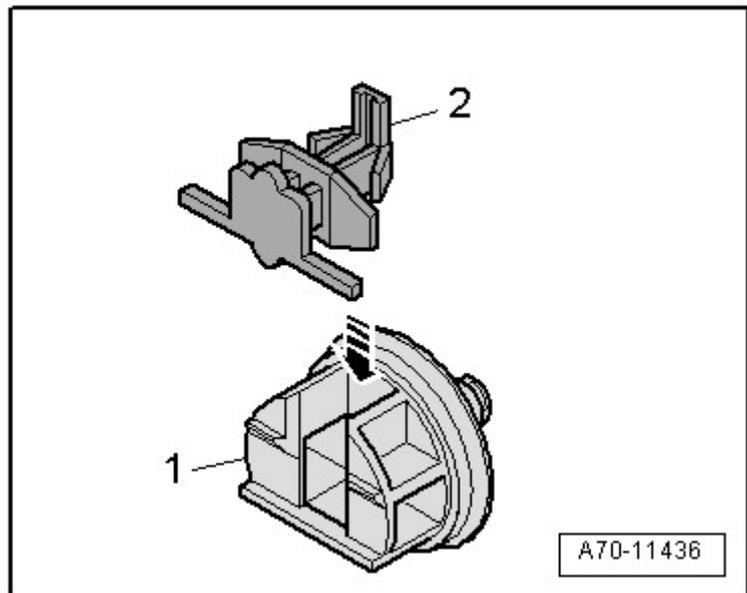

- Engage end of cable -4- in lever of interior door handle.
- 1 Open side of eyelet at end of cable must face upwards.
- Pull Bowden cable -2- for interior door handle in direction of -arrow- and insert it in cable support bracket -1-.
- 1 Catch -3- must engage audibly in cable support bracket.

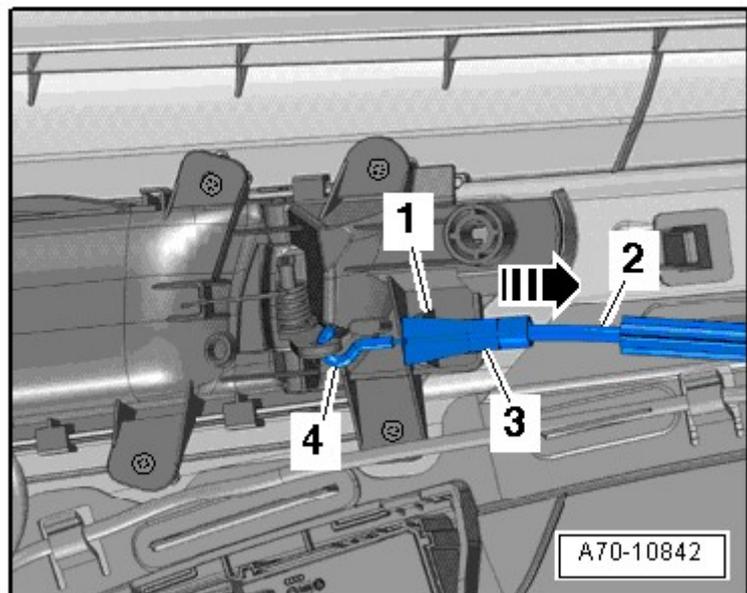


! WARNING

Make sure that the door is properly sealed when it is installed; otherwise the crash sensor (pressure sensor) may not function correctly.

The retaining clips -arrows- for the door trim provide a seal for the system. If necessary, renew retaining clips for door trim.

- Plug in electrical connector at door control unit.
- Position door trim at window slot and press on downwards.
- Carefully position clips for door trim on door and press door trim

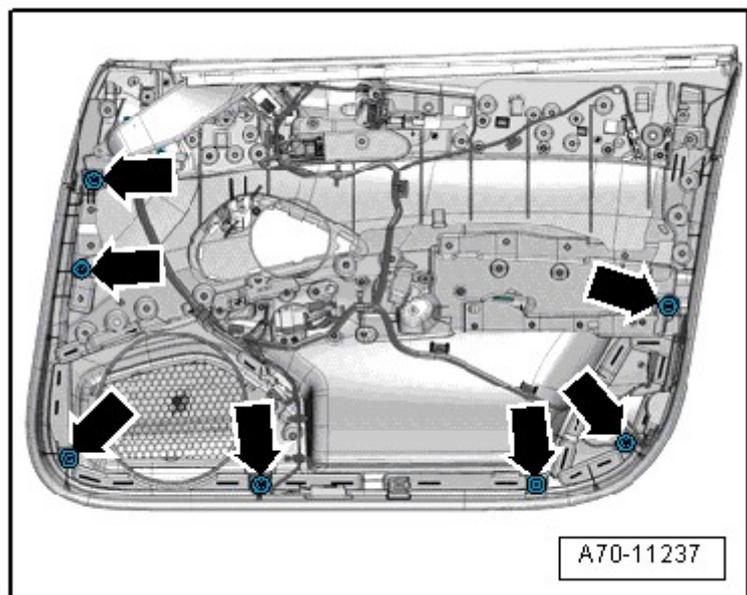

onto door until it engages audibly at anchorage points.

Perform remaining installation steps in reverse order of removal; observe the following:

Notes for installation: tightening torques, renewing components etc.

→ [Chapter „Exploded view - door trim \(front\)“](#)