

Removing and installing exterior mirror

Removing


Remove door trim → [General body](#)

- [repairs, interior; Rep. gr.70; Door trim \(front\); Removing and installing door trim \(front\).](#)

Remove window frame trim

- → [General body repairs, interior; Rep. gr.70; Door trim \(front\); Removing and installing window frame trim.](#)

- Cut through cable tie -3-.
- Pull catch -2-, press release mechanism and unplug electrical connector -1-.

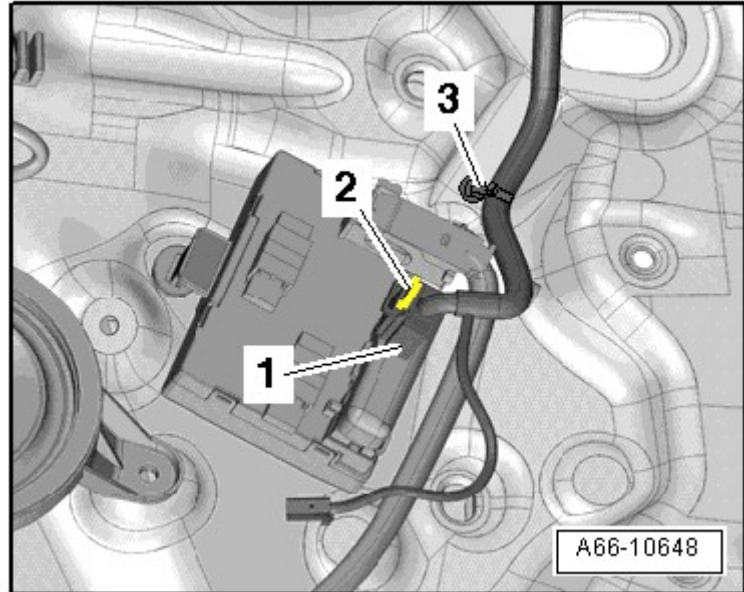

- Take out sealing plugs -1- and -4-.
- Pull off window guide -2- in area of bolt.
- Remove bolts -arrows-.

Detach exterior mirror and at the

- same time guide sealing grommet -3- with wiring harness out through opening in body.

Installing

Install in reverse order of removal.

Tightening torques

- t → [Chapter „Exploded view - exterior mirror“](#)

