

Audi > A8/A8L > 2004-2008


Electrical Equipment

92 - Removal and Installation

.

Spray Nozzles, through 08.07

Removing

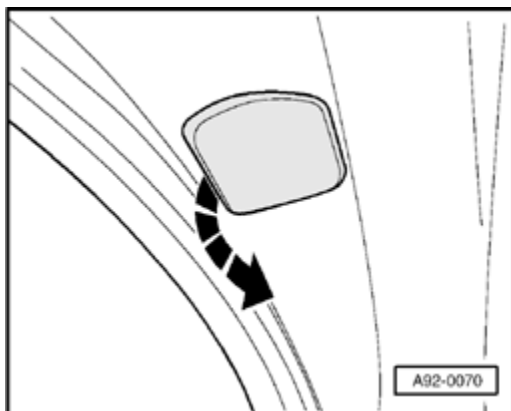

- Unclip washer fluid nozzles from bottom of hood - **arrow** - .


- Disconnect washer fluid line - **1** - from unclipped nozzle.
- Disconnect electrical connector - **2** - .

Installing

Install in reverse order of removal, observing the following:

- When attaching water hose, make sure it engages audibly in connection of nozzle.

- Insert nozzle in hood.

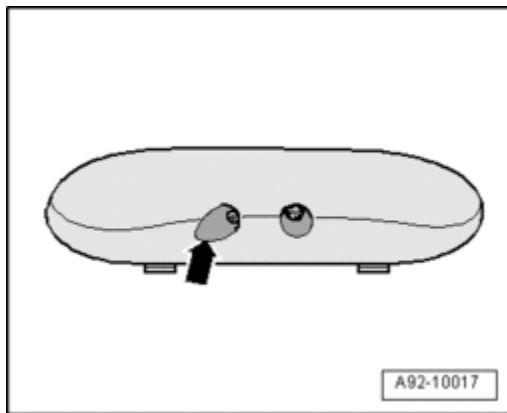

- ♦ Oval opening - **arrow** - for single nozzle must point toward outside of vehicle.

Copyright © 2008 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: