



## Removing and installing front interior light with roof electronics control unit -J528


- Switch off ignition and take out ignition key.  
Carefully prise lenses -1- out of interior light on front edge using removal lever -80 - 200- as shown in illustration.

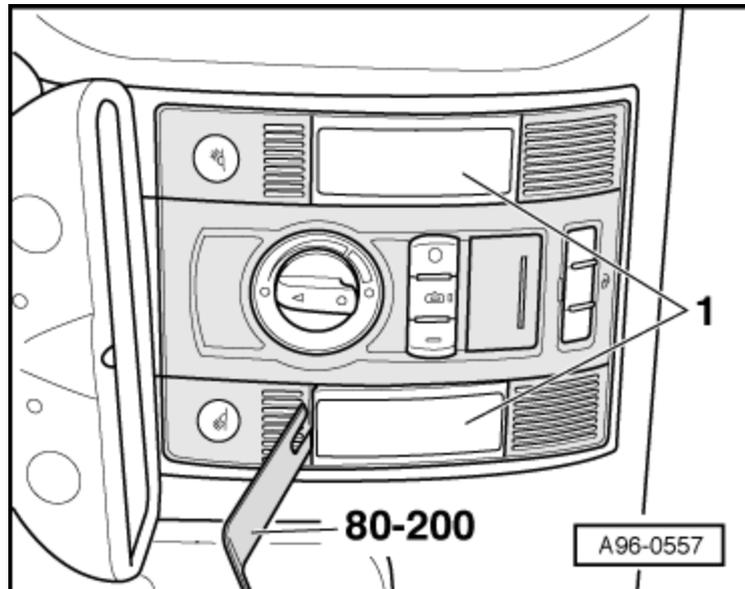

- Pry out switch trim with removal lever -80 - 200- as shown in illustration.

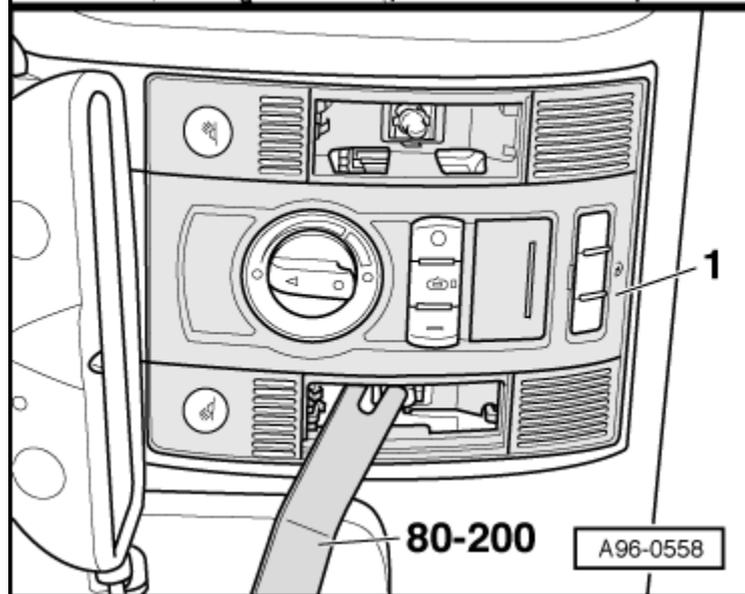

- Unscrew bolts -arrows-.
- Pivot front interior light downwards and remove from roof trim.
- Unplug multi-pin connector.

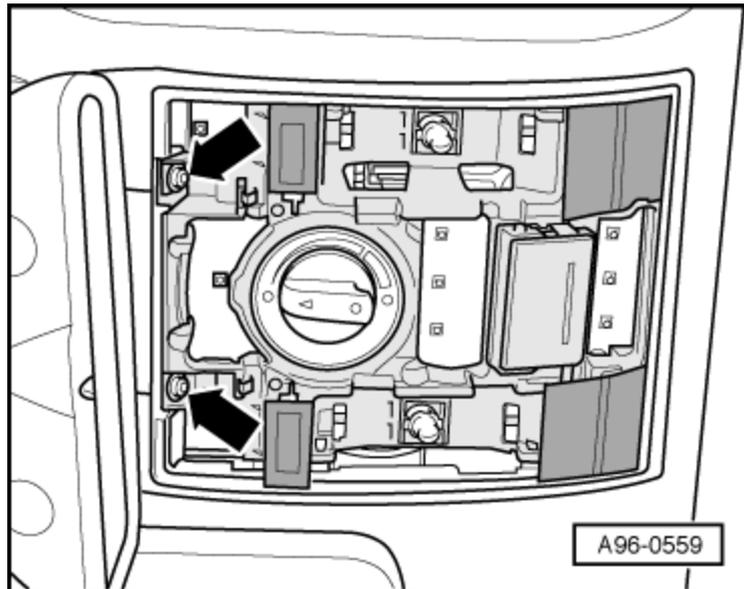


- Press retaining tab -1- at multi-pin connector.
- Release retaining clips of connectors -arrow- and unplug connectors.
- Unplug remaining electrical connectors.

Installing

Installation is carried out in the reverse order; note the following:

- Fit interior light and secure.
- Roof electronics control unit -J528- must be re-encoded after renewing  
 → [Vehicle diagnostic tester](#).
- Select function or path:

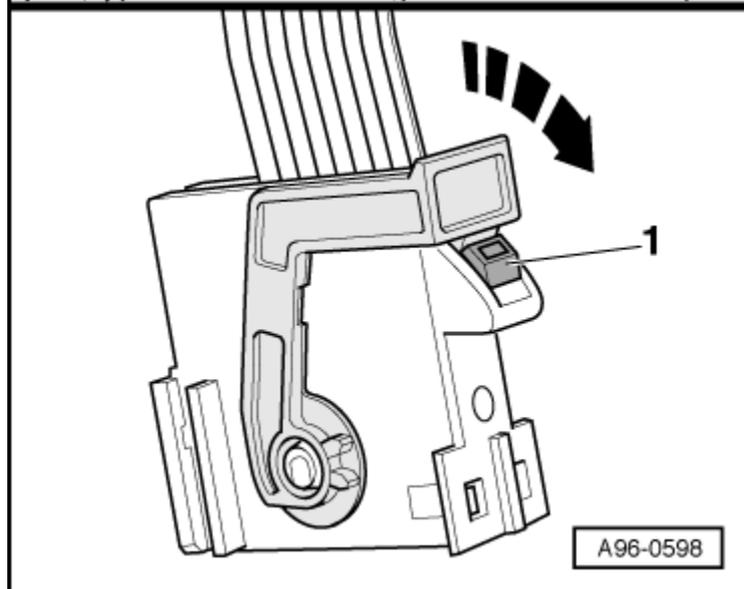

## Renewing bulbs for reading light (front)

- ◆ Fitting location: on underside in interior mirror

### Removing


- Release retainer tab at lens -2- for reading light and unclip downwards.

- Wrap adhesive tape around tips of flat-nose pliers and pull glass base bulb -1- (12 V, 5 W) out of bulb holder.

### Installing

Installation is carried out in the reverse order; note the following:


- Insert lens for reading light and press on until it engages.

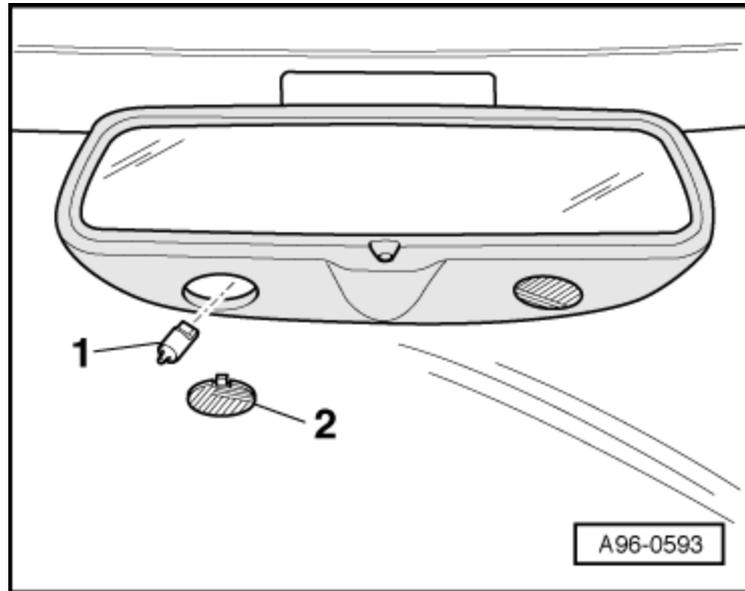

## Removing and installing rear interior light/reading light with rear operating unit for roof module -E467


### Removing

- Use removal lever -80 - 200- to carefully pry off cover panel of interior light/reading light as shown.

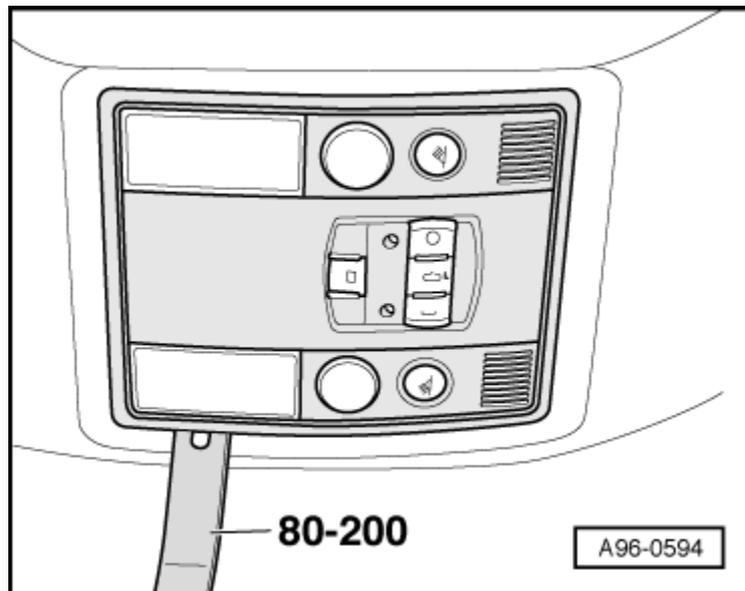

Insert removal lever -80 - 200-  
between housing of interior  
light/reading light and mounting  
frame in headliner as shown.

- Release retaining tabs -arrows-  
and take interior light/reading light  
(rear) downwards out of opening in  
headliner.

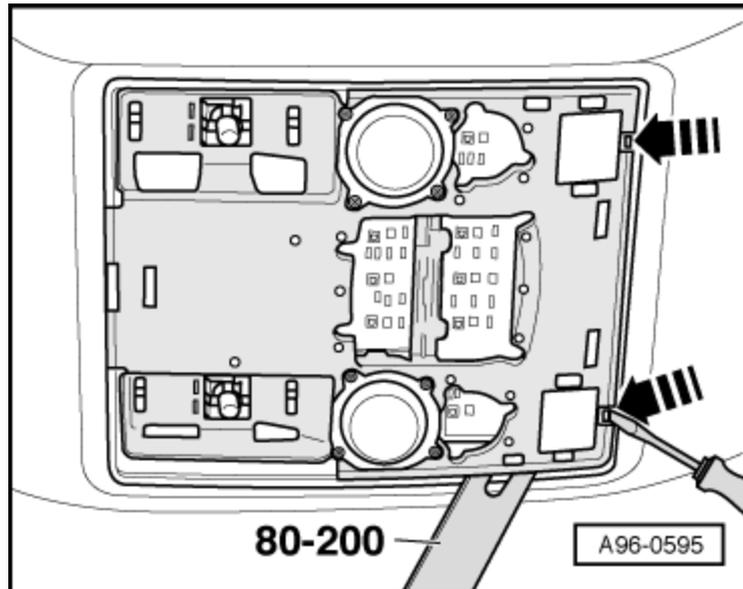

- Press retaining tab -1- at multi-pin  
connector.
- Release retaining clips of  
connectors -arrow- and unplug  
connectors.

#### Installing

Installation is carried out in the  
reverse order; note the following:

- Insert rear interior light/reading  
light into roof trim and clip into  
place.

