

## Telematics


### Removing and installing telematics back-up battery

**Note:**

*Back-up battery is only to be disconnected from control unit if it is to be replaced.*

**Removing:**

- → Slacken off both bolts -arrows- on underside of telematics control unit and detach cover.

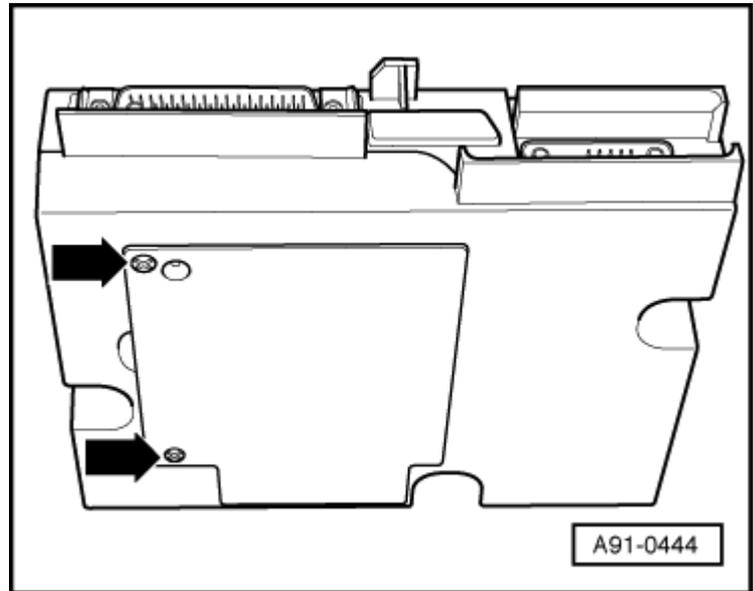

- → Pull connector -1- apart and pull out back-up battery -2-.

**Installing:**

- Install accordingly in reverse order of removal.

