


Trims

Remove boot trim

- – → Pull pin out of expanding clip -2- and pull expanding clip out of boot trim -1-.
- – Lift boot trim out of cross-panel trim -A-.

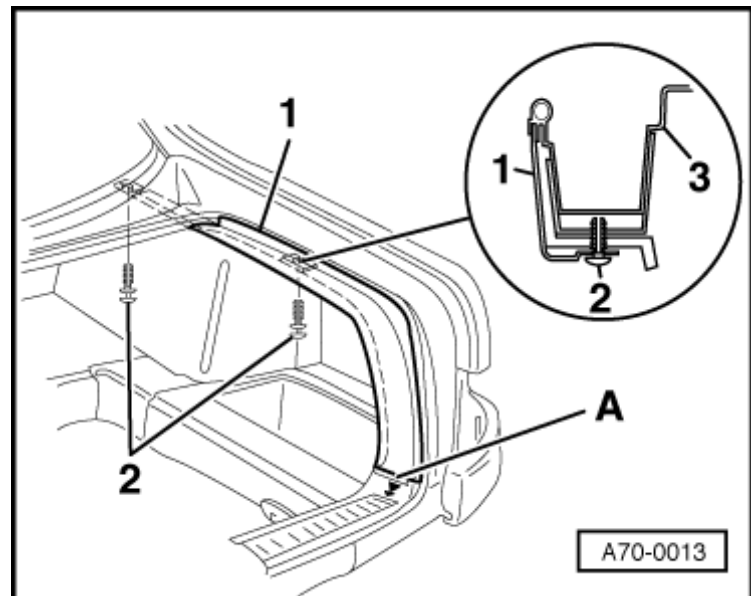

- – Fold back trim for boot bulkhead slightly.
- – → Pull pin -2- out of expanding clip and pull expanding clip out of trim.
- – Fold back trim for bottom of boot.
- – Take out trim -1-.

