

Telematics

Removing and installing telephone/telematics control unit -J526

Removing:

- Activate service mode of control unit.

=> Radio, Telephone and Navigation System Self-diagnosis; Repair Group 01; Telematics System Self-diagnosis; Adaption


- Unplug connectors of control unit and aerial filter -R87.

- → Slacken off nuts -1- (10 Nm) and detach control unit from holder.
- Remove aerial filter -R87 => Page 91-410.
- If holder is also to be removed, unfasten the four nuts -arrows- (10 Nm).

Installing:

- Install accordingly in reverse order of removal.
- Deactivate service mode of control unit.

=> Radio, Telephone and Navigation System Self-diagnosis; Repair Group 01; Telematics System Self-diagnosis; Adaption

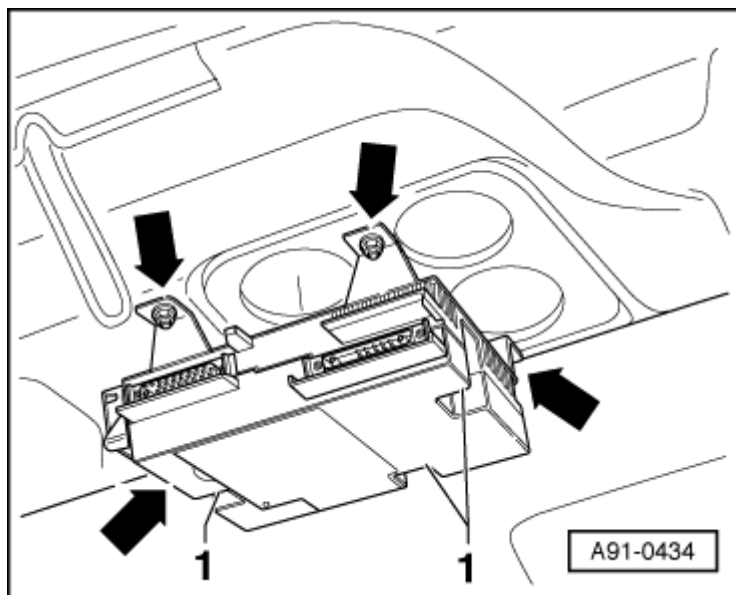

Observe the following if control unit is to be replaced:

- Remove control unit => Page 91-403.
- Remove telematics SIM card => Page 91-405.
- Complete and submit fax form "Activation of Audi telematics (Fax 1.1)" (enter new control unit data and mark unit replacement).

Notes:

- ◆ Telematics SIM card in control unit remains with vehicle.
- ◆ Back-up battery must be ordered separately.
- Install new back-up battery => Page 91-413.
- Insert telematics SIM card.
- Install control unit => Page 91-403.

- Deactivate service mode of control unit.

=> Radio, Telephone and Navigation
System Self-diagnosis; Repair Group 01;
Telematics System Self-diagnosis;
Adaption

- Perform initialisation => Page 91-406.