

Servicing rear lights

Removing and installing rear light in side panel

Removing

- – Switch off ignition and all electrical consumers and pull out ignition key.
- – Open and remove left/right storage compartment cover in luggage compartment.
- – Open and remove rear light cover.
- – Remove left/right luggage compartment side trim.

=> [General body repairs, Interior; Repair group 70; Trim panels; Removing and installing luggage compartment trim](#)

- – → Turn rotary knob -2- at bulb carrier -1- anti-clockwise and remove.
- – Unscrew hexagon nuts (4 Nm) -3- and remove rear light -4- from outside of vehicle.

Installing

- – Install in reverse sequence.

Note:

When installing, ensure that seal between body and rear light housing seals properly.

- – Before tightening the securing nuts, align the rear light with the contours of the body (uniform gaps all round).

