

Audi A8

Current Flow Diagram


No. 4 / 1

Edition 04.1998

Provision for radio

Model year 1997

Fuse box

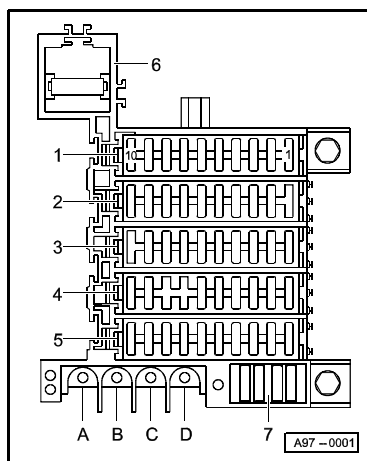


- 1 - Fuse carrier 1 (ST1), black
- 2 - Fuse carrier 1 (ST2), red
- 3 - Fuse carrier 1 (ST3), yellow
- 4 - Fuse carrier 1 (ST4), blue
- 5 - Fuse carrier 1 (ST5), brown
- 6 - Radiator fan fuse (S42)
- 7 - Spare fuses

A, B, C, Screwed junctions

D -

Relay and fuse carrier, luggage compartment, right

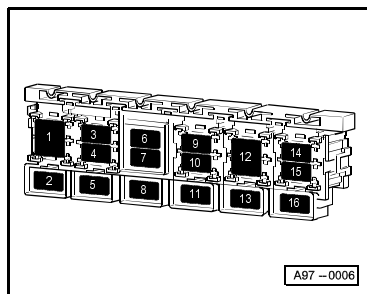

Position of relays:

1 - Terminal 30 junction box

6 - Radio fuse (S92)

Fuse colours:

30 A - green

25 A - white

20 A - yellow





15 A - blue

10 A - red

5 A - beige

Current Flow Diagram

No. 4 / 2

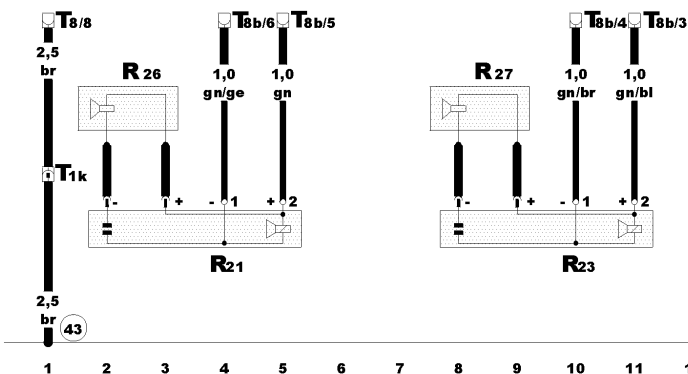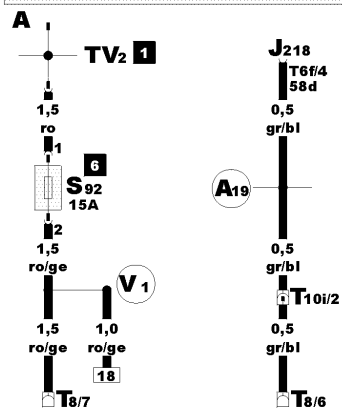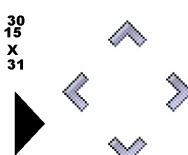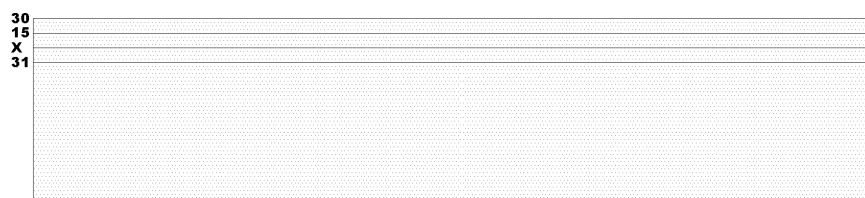


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

- A - Battery
- J218 - Combi-processor in dash panel insert
- R21 - Bass loudspeaker, front left
- R23 - Bass loudspeaker, front right
- R26 - Middle-high tone loudspeaker, front left
- R27 - Middle-high tone loudspeaker, front right
- S92 - Radio fuse
- T1k - Single connector, brown, in centre console
- T6f - 6-pin connector, black, on dash panel insert
- T8 - 8-pin connector, black, radio connector III
- T8b - 8-pin connector, brown, radio connector II
- T10i - 10-pin connector, yellow, in centre console
- TV2 - Terminal 30 junction box
- 43 - Earth point, lower part of right A-pillar
- A19 - Connection (58d), in dash panel wiring harness
- V1 - Positive (+) connection (30), in rear loudspeaker wiring harness

Audi A8

Current Flow Diagram

No. 4 / 3

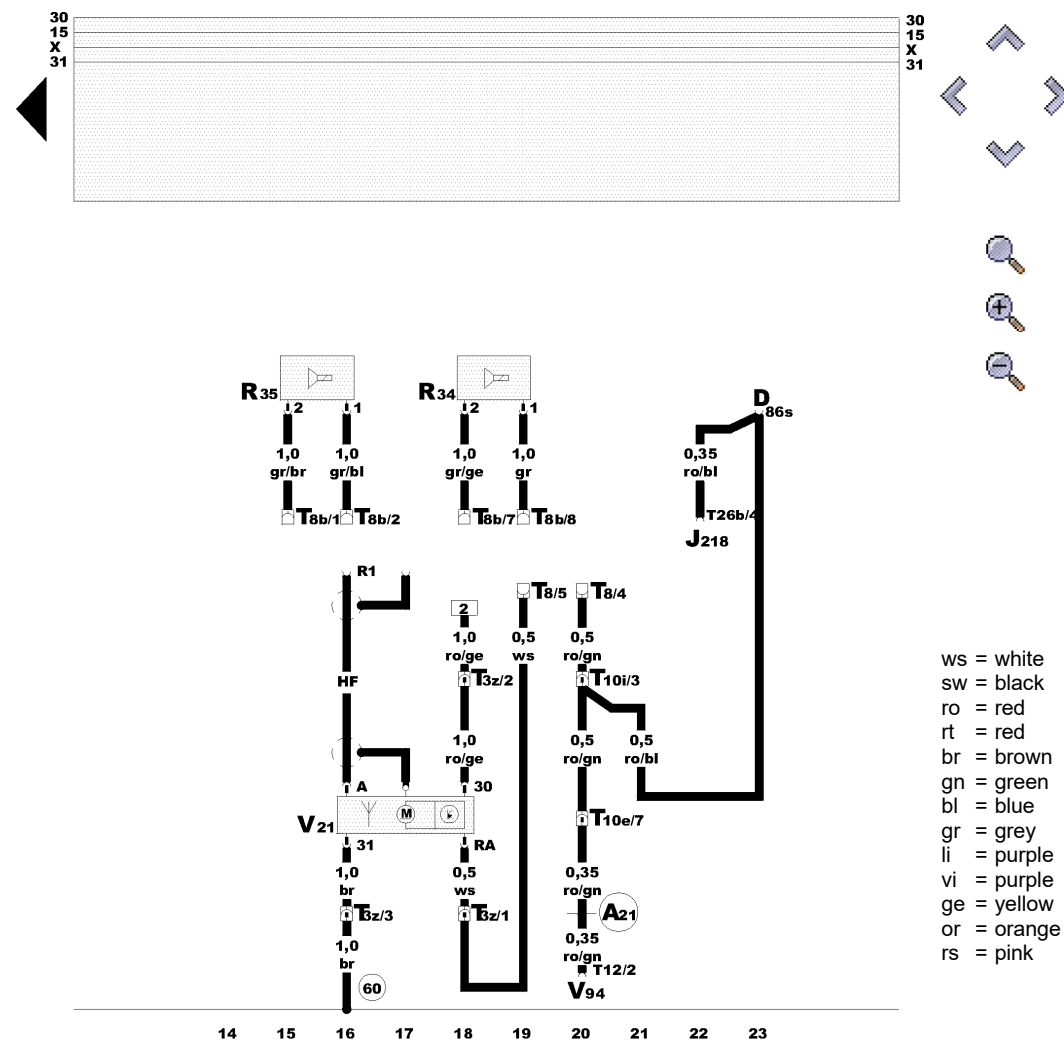

Provision for radio

- D - Ignition/starter switch
- J218 - Combi-processor in dash panel insert
- R34 - Middle-treble tone loudspeaker, rear left
- R35 - Middle-treble tone loudspeaker, rear right
- T3z - 3-pin connector, black, near aerial motor
- T8 - 8-pin connector, black, radio connector III
- T8b - 8-pin connector, brown, radio connector II
- T10e - 10-pin connector, green, connector point, wheelhouse, right
- T10i - 10-pin connector, yellow, in centre console
- T12 - 12-pin connector, connector plug A at V94
- T26b - 26-pin connector, yellow, on dash panel insert
- V21 - Aerial motor
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- 60 - Earth point, near right tail light
- A21 - Connection (86s), in dash panel wiring harness