

Removing and installing display unit for front information display and operating unit control unit -J685-

Display unit for front information display and operating unit control unit -J685- (display) is located in dash panel (centre).

- Switch off ignition and all electrical equipment and remove ignition key.

Removing

The display unit for front information display and operating unit control unit -J685- can only be removed when it is extended.

- Remove cover for display unit on dash panel → [General body repairs, interior; Rep. gr.70; Dash panel; Exploded view - dash panel.](#)

When removing trim panel (front passenger side), securing bolts for display mounting are removed at the same time.


Control unit 1 for information electronics -J794- must be removed first to improve access to the connectors.

Display unit for front information display and operating unit control unit -J685-

- Extend display unit for front information display and operating unit control unit -J685-.
- Carefully pull display mounting -1- out of dash panel -arrow- until electrical connectors at display unit for front information display and operating unit control unit -J685- can be reached.
- Release and unplug electrical connector for display mounting.
- Pull display mounting completely out of dash panel.

Removing display unit for front information display and operating unit control unit -J685-

The display unit for front information display and operating unit control unit -J685- is attached to the display mounting with two securing bolts.

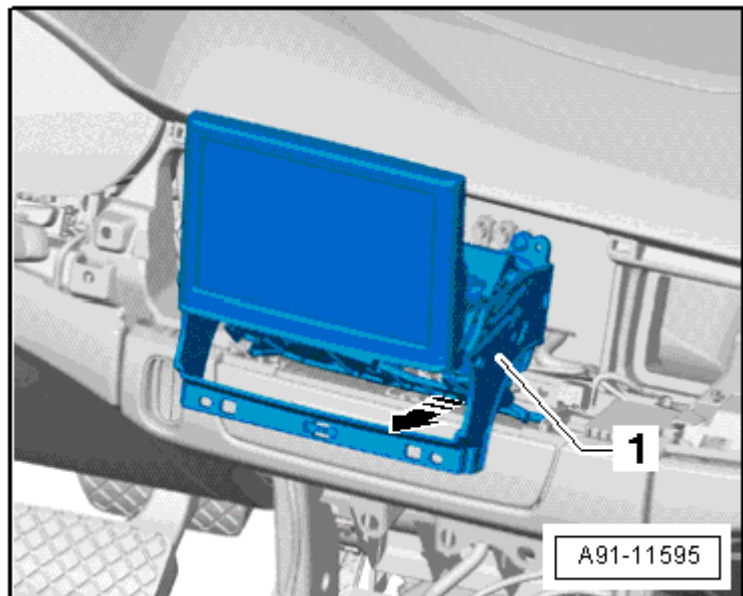

- Remove bolts -2- and detach display unit for front information display and operating unit control unit -J685--3- from display mounting -1-.

Installing

- Installation is carried out in reverse sequence; note the following:
-

Make sure that wiring from display unit for front information display and operating unit control unit -J685- to wiring harness and control unit 1 for information electronics -J794- is correctly routed, as otherwise display unit for front information display and operating unit control unit -J685- will not extend.

Tightening torques

- ◆ → Chapter „Overview of fitting locations - infotainment system, up to model year 2013, including vehicles with high-voltage electrical system“
- ◆ → Chapter „Overview of fitting locations - infotainment system, up to model year 2014, excluding vehicles with high-voltage electrical system“
- ◆ → Chapter „Overview of fitting locations - infotainment system, USA, up to model year 2013, including vehicles with high-voltage electrical system“
- ◆ → Chapter „Overview of fitting locations - infotainment system, up to model year 2014, excluding vehicles with high-voltage electrical system“
- ◆ → Chapter „Overview of fitting locations - infotainment system, Japan, up to model year 2013, including vehicles with high-voltage electrical system“
- ◆ → Chapter „Overview of fitting locations - infotainment system, Japan, up to model year 2014, excluding vehicles with high-voltage electrical system“

