

Removing and installing loudspeaker trim (centre)



Note

Proceed very carefully when removing and installing as the loudspeaker trim can be damaged quite easily.

Removing

- Using a small screwdriver, carefully disengage loudspeaker trim -1- from retaining pins (rear, as seen in direction of travel) -arrow A-, but only pull upwards about 10 mm.



Caution

Take care not to pull loudspeaker trim up any further as this would cause retaining pins at (front, as seen in direction of travel) to break off.

- Push a long screwdriver all the way through under loudspeaker trim towards front until it makes direct contact with front retaining pin (right-side).
- Carefully rotate screwdriver about its own axis -arrow B- until retaining pin -1- disengages from guide -2-.
- Repeat procedure for other retaining pins.

Installing

Installation is carried out in the reverse order; note the following:

Notes for installation: tightening torques, renewing components etc. → Chapter „Exploded view - dash panel“

