Servicing headlights

General overview - gas-discharge headlights


- Lens with integrated turn signal housing
- Turn signal bulb

 ◆ 12 V, 21
 W orange
 ◆ Changing bulb
 => Page 94

- Bulb holder for turn signal bulb
- Reflector for dipped beam, main beam and side light
- Gas-discharge bulb
 - ◆ 12 V, 35 W
 - ◆ Changing bulb
 => Page <u>94-</u>20
- Locking ring (bayonet fastener) for gas-discharge lamp
- Main beam bulb

 ♦ H7 12
 - V, 55 W• Changing bulb => Page <u>94-</u> <u>22</u>
- Side light bulb
 - ◆ 12 V, 5 W
 ◆ Changing bulb
 => Page <u>94-</u>

- Headlight housing with seal
- Housing cover (large)
- Housing cover (small)
- Starter unit for gas-discharge bulb -N195
 - ◆ Removing and installing
 => Page <u>94-</u>

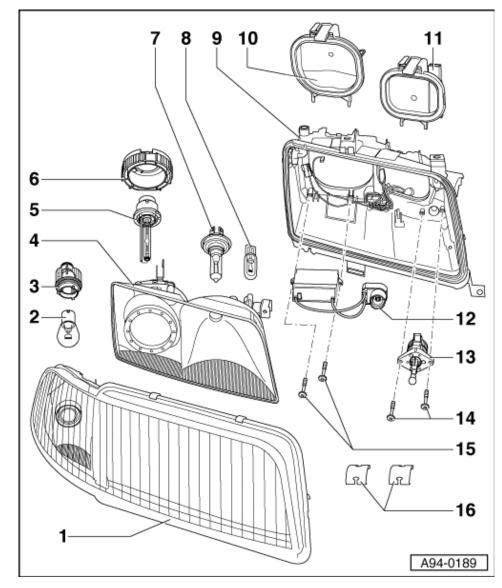

- <u>33</u>
 Headlight range control positioning motor -V48/V49
 - ◆ Removing and installing => Page <u>94-</u> 31
- Securing bolt, 1.3 Nm
- Securing bolt, 1.3 Nm
- Retaining clip

