


Audi A8

Current Flow Diagram


No. 129 / 10

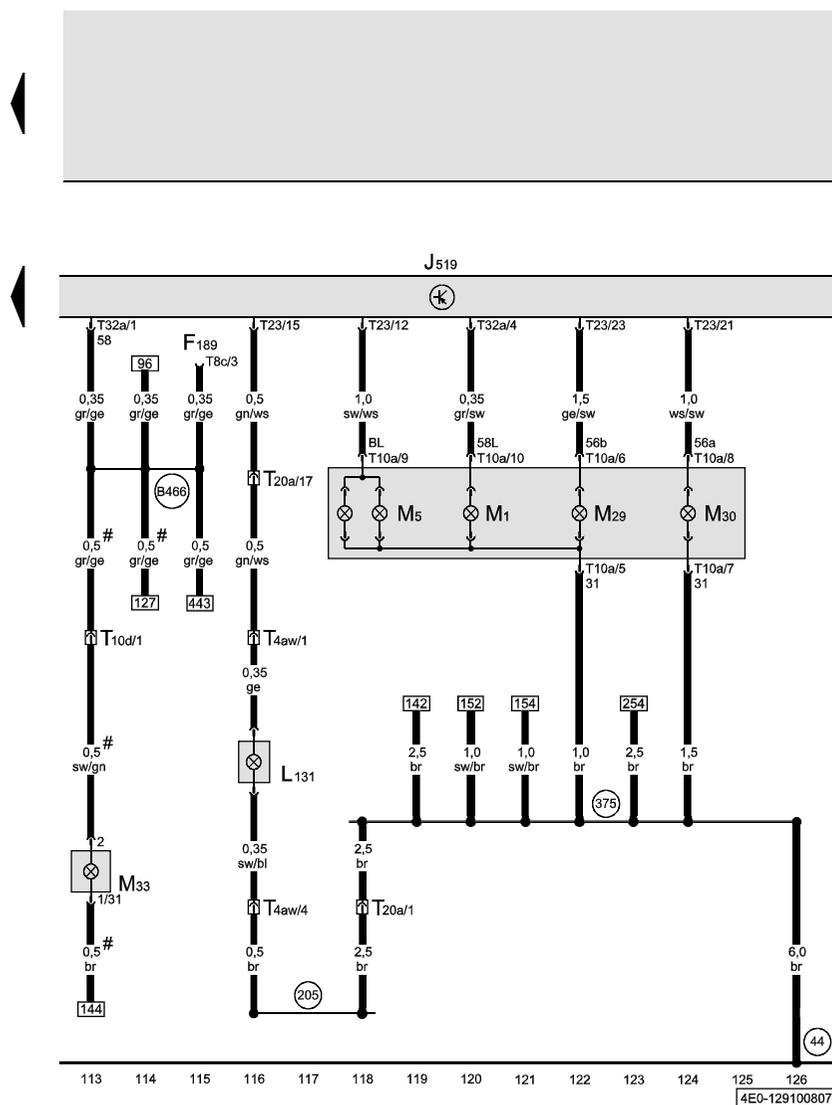

Onboard supply control unit, left side light bulb, front left turn signal bulb, left dipped beam bulb, left main beam bulb, driver side exterior mirror turn signal bulb

- F189 - Tiptronic switch
- J519 - Onboard supply control unit
- L131 - Driver side exterior mirror turn signal bulb
- M1 - Left side light bulb
- M5 - Front left turn signal bulb
- M29 - Left dipped beam bulb
- M30 - Left main beam bulb
- M33 - Front left side marker bulb
- T4aw - 4-pin connector, black, in driver door
- T8c - 8-pin connector, black, in centre console on selector lever console
- T10a - 10-pin connector, black, on left of headlight
- T10d - 10-pin connector, black, in front left engine compartment
- T20a - 20-pin connector, black, left A-pillar
- T23 - 23-pin connector, black, connector B, on onboard power supply control unit
- T32a - 32-pin connector, connector C, on onboard supply control unit
- 44 - Earth point, lower part of left A-pillar
- 205 - Earth connection, in driver door wiring harness
- 375 - Earth connection 10, in main wiring harness
- 388 - Earth connection 23, in main wiring harness
- B466 - Connection 2 in main wiring harness
- # - only USA

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

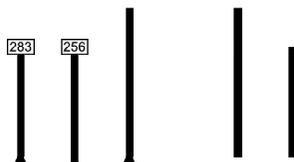

```
ERROR: undefined
OFFENDING COMMAND: ~
STACK:
```