

Repairing passenger airbag


Removing and installing passenger airbag unit on RHD vehicles 07.96 ä

Note:

Exploded view in Fig. is a mirror image.

Important


1. Airbag guide
2. Bolt - 5 Nm
◆ 2 off

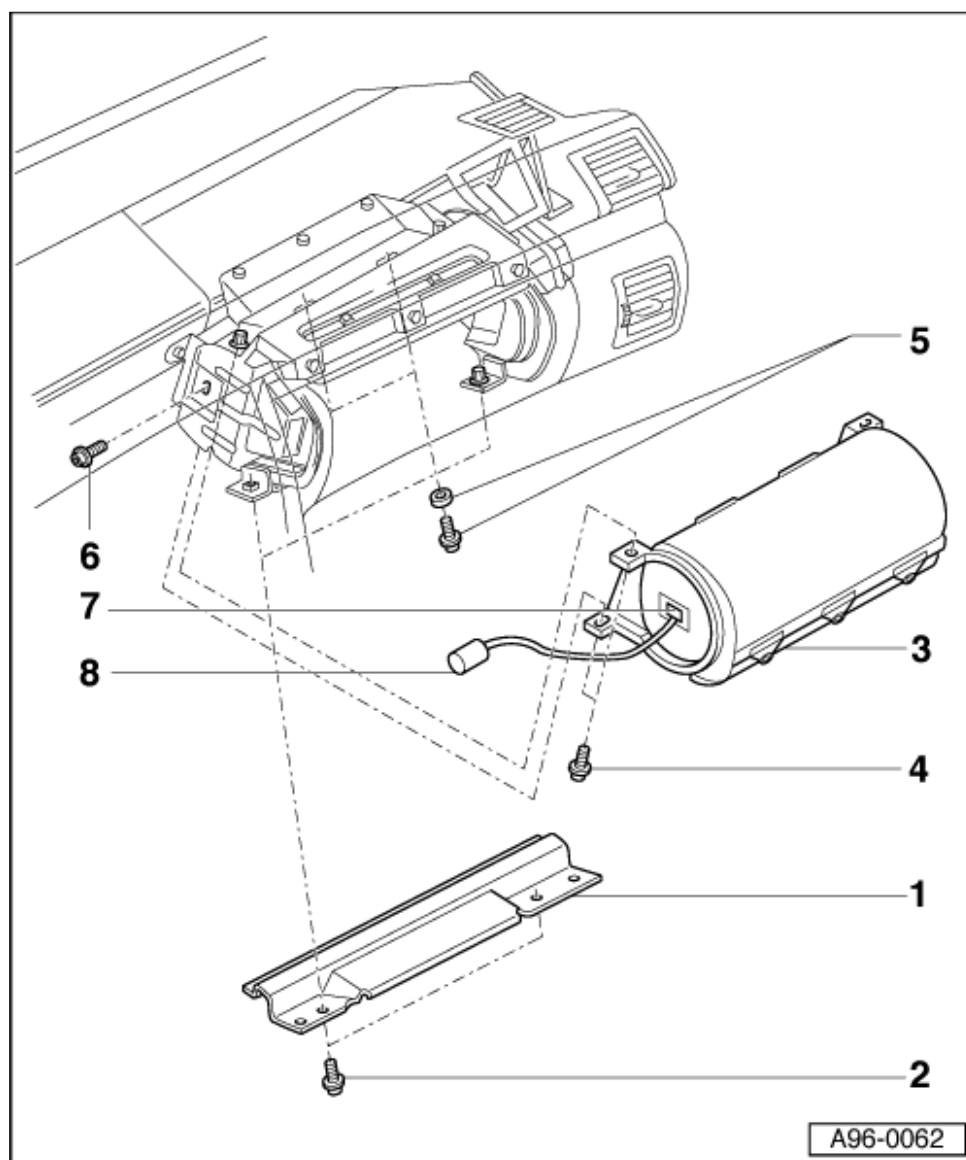

3. Passenger's airbag unit

- ◆ Removing:
 - In vehicles with encoded radio/radio-navigation system (RNS) Refer to code; if necessary, establish.
 - Detach battery earthing strap/cable, cover over negative terminal.

- Open glove compartment.
- Unscrew glove compartment frame.
- Pull glove compartment frame backwards out of guides.
- Detach connector for glove compartment light; leave Bowden cable of lock connected.
- Lay aside glove compartment in passenger's footwell.

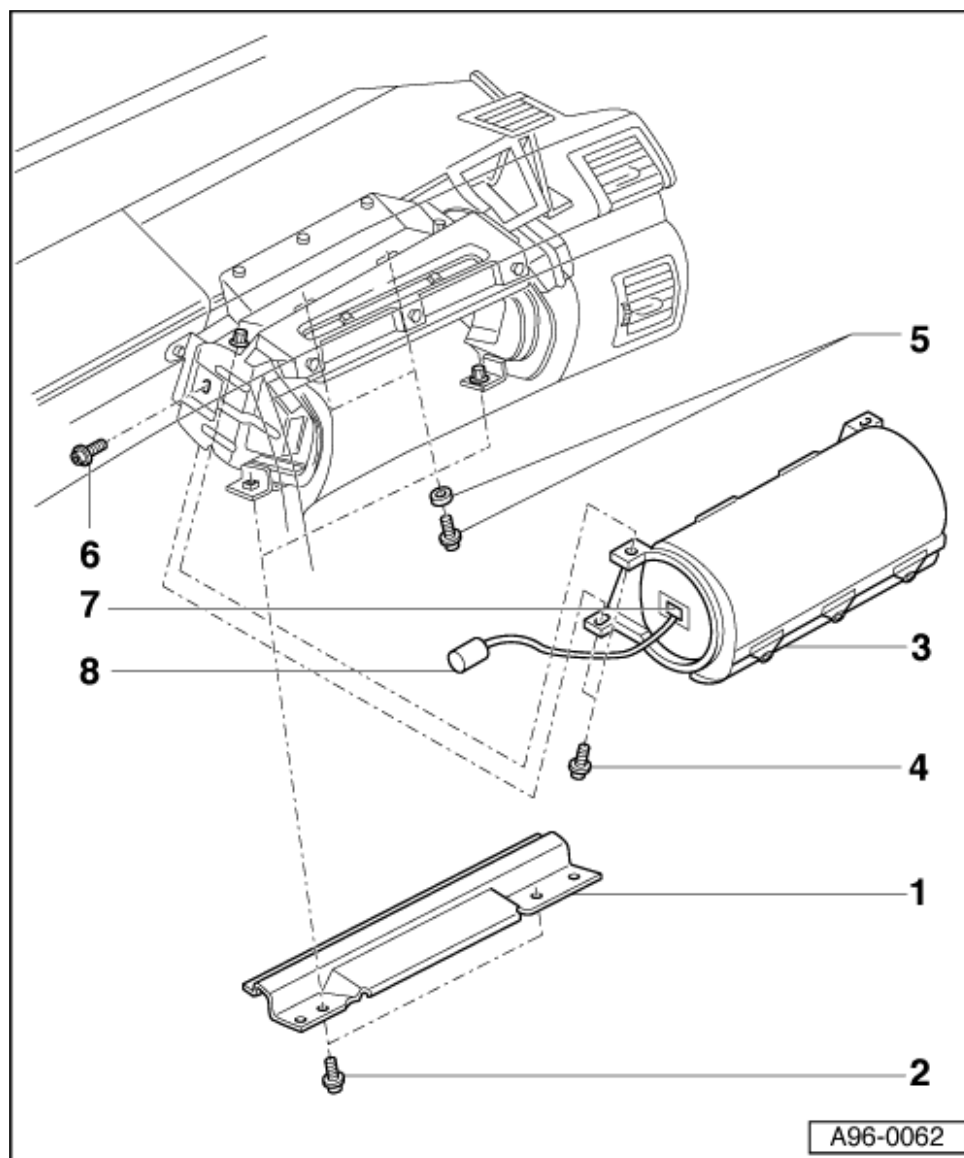


- Unscrew 4 bolts -Item 4- of airbag unit.
- Release and detach orange connector - Item 8-.
- Remove airbag unit downwards and lay down with cushioned side facing upwards.
- ◆ Install in reverse order, note the following:
 - Switch ignition on.
 - Connect

battery.

Important
There must be no-one in the vehicle when the battery is being connected.

- 4. Bolt - 9 Nm**
 ◆ 4 off

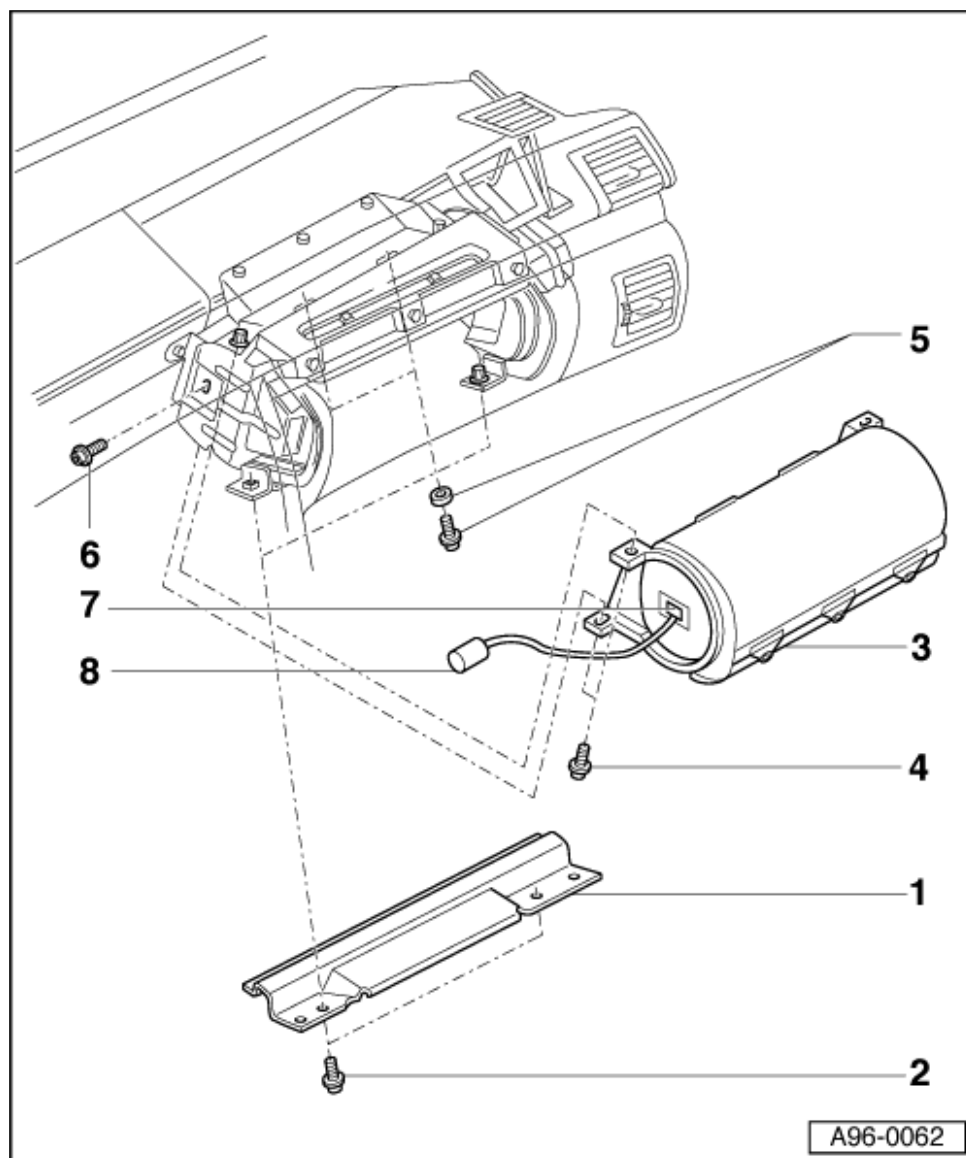

- 5. Bolt with washer - 5 Nm**

- ◆ For retaining frame
- ◆ 2 off
- ◆ Replace retaining frame after triggering of passenger's airbag

- 6. Bolt - 9 Nm**

- ◆ For retaining frame
- ◆ 4 off
- ◆ Replace retaining frame after triggering of passenger's airbag

- 7. Red connector**

- ◆ Must not

be
disconnected
from airbag
unit -Item 3-

- ◆ If connector
has been
detached
airbag unit is
defective
and must be
replaced

8. Orange connector

- ◆ Installation
position: At
top in dash
panel
opening for
glove
compartment


Notes:

- ◆ After connecting
the battery, please
ensure that the
vehicle accessories
(radio, clock,
electric window
lifters) are checked
according to
workshop manual
and/or operating
instructions.

=> Electrical System;
Repair group 27; Battery

- ◆ If the fault warning
light (K 75) for
airbag signals a
fault after assembly
the fault memory
must be erased and
again be
interrogated by
using fault reader
V.A.G 1551.

=> Body Self-diagnosis;
Repair group 01

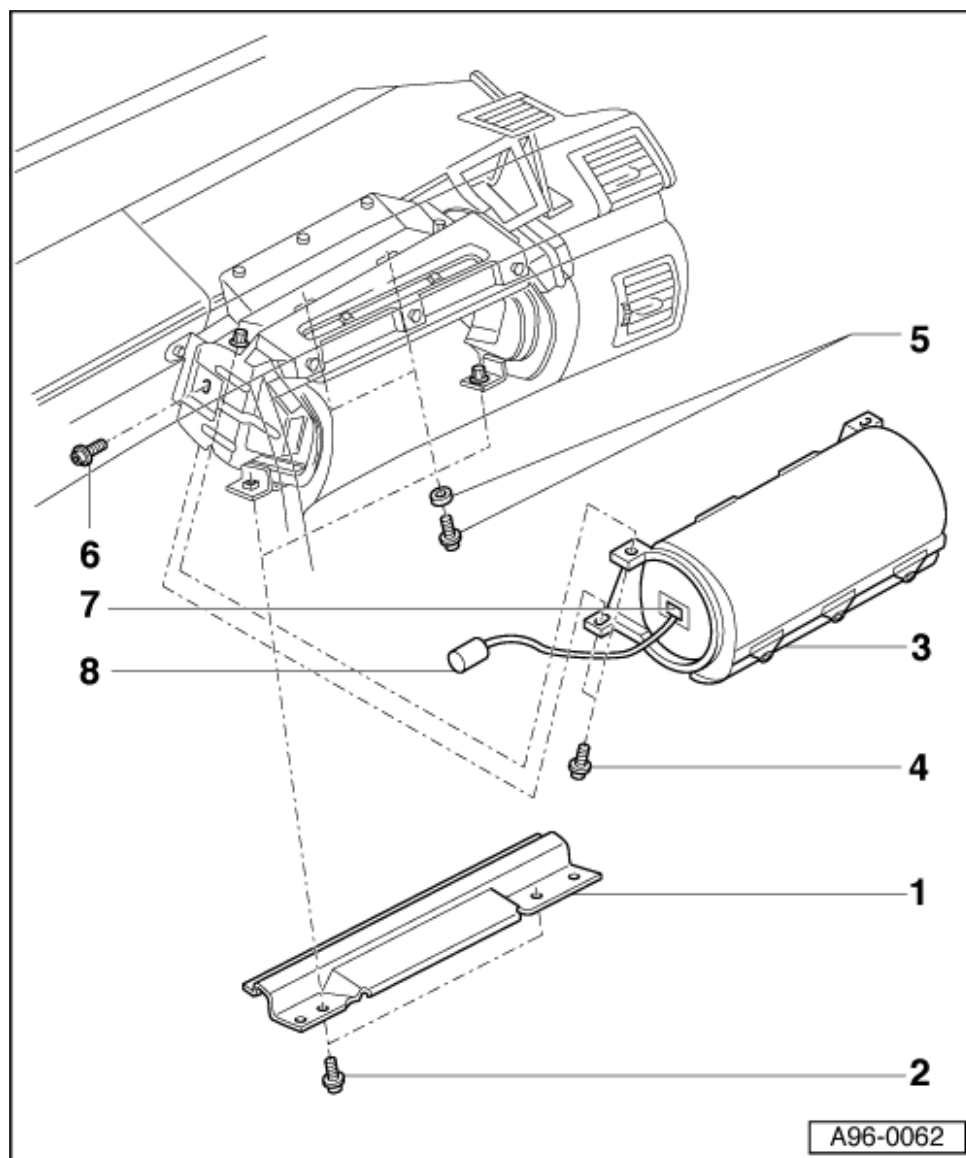

A96-0062