



Storage compartments/covers

Removing and installing steering column switch trim

- → Remove screws -arrows- and detach trim -1-.
- Remove driver's airbag unit =>from Page [69-56](#).
- Remove steering wheel =>from Page [69-60](#).

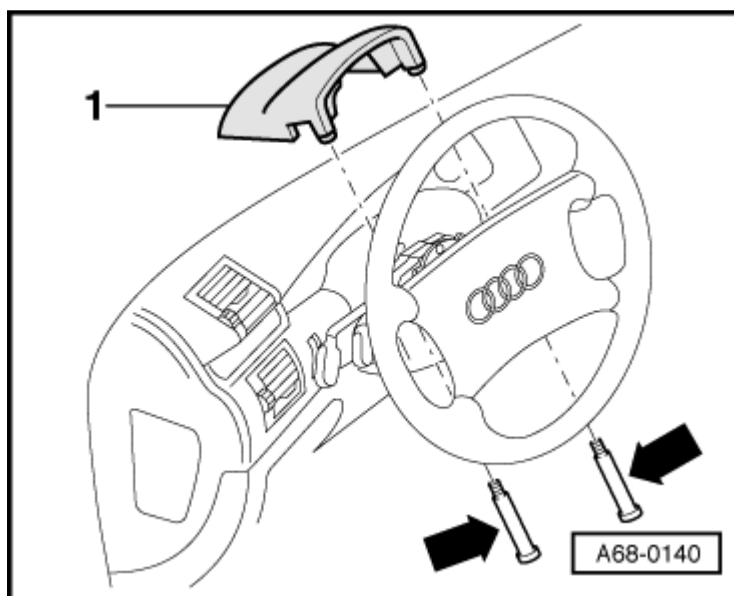

- → Detach lower surround in direction of arrow.

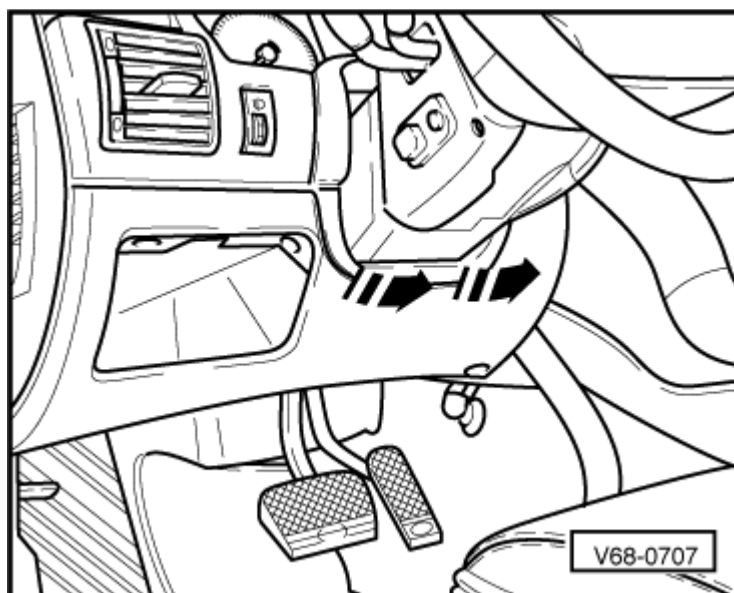

- → Remove screws -1- and detach grip -2- for steering column adjustment.
- Remove screws-7- and -8- and detach lower trim for steering column switch -4-.
- If applicable, detach connector from switch -6- or unscrew switch.

Note:

Fig. shows trim for steering column switch ä 06.97.

