

Components in passenger compartment

Removing and installing top left/right dash-panel vent

- Removing bottom left/bottom right dash-panel vent =>Page [80-44](#).
- → Screw out bolt -A-.
- Use auxiliary tools to pull dash-panel vents out of dash panel.

Note:

Making auxiliary tool =>Page [80-42](#).

