


Removing and installing fuel pump control unit -J538-

Removing


Observe safety precautions → Chapter.

Observe rules for cleanliness → Chapter.

- Switch off ignition and remove ignition key.
- Remove luggage compartment floor covering.
- Detach cover for flange (left-side) - arrows-.

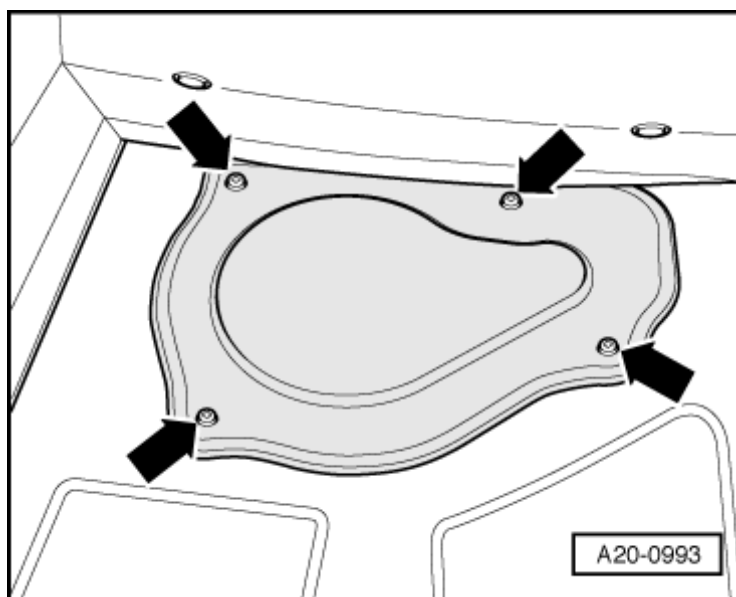

- Unplug electrical connectors -1- and -2- on flange (left-side).

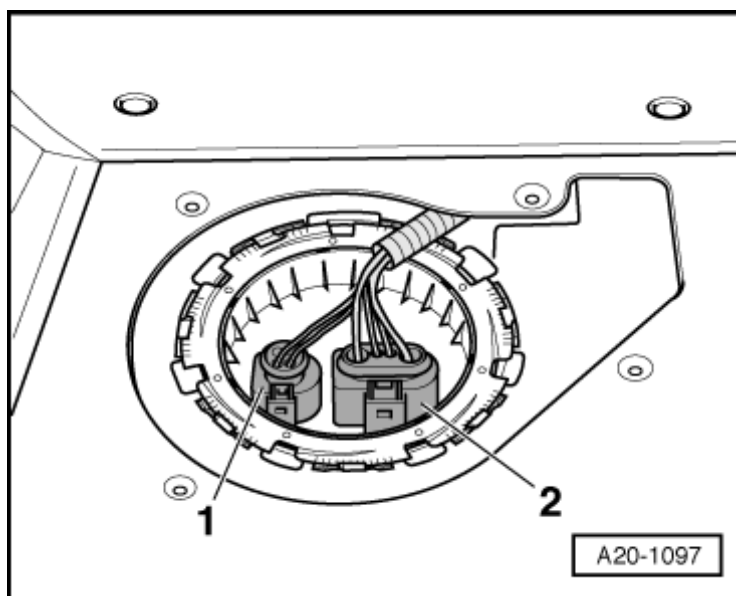


- Remove plugs in luggage compartment floor and unscrew nuts -arrows-.
- Slightly lift floor panel in the area of flange by hand and remove fuel pump control unit -J538- between floor panel and fuel tank flange.
- Unplug electrical connector at control unit.

Installing

Install in reverse order.

Tightening torque

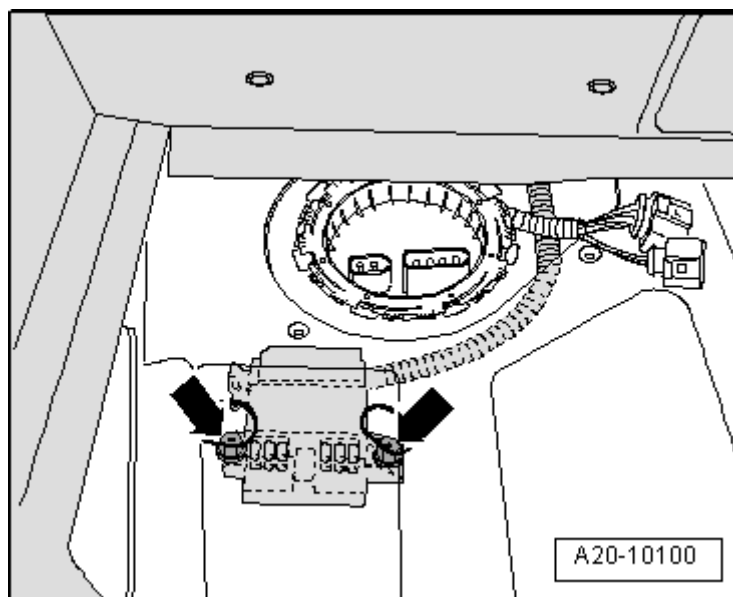

Component	Nm
Fuel pump control unit -J538- to fuel tank	1.6