

## Trims

## Removing and installing rear cross-panel trim

- - → Pull pin -2- out of expanding clip and pull expanding clip out of trim.
- - Take out cross-panel trim -1-.
- - Detach connector for boot light.

