

## Sun roof


### Adjusting height of sun roof panel

- – Adjust the height at the front and rear, as shown, to prevent wind noise.
- – Check height adjustment in each case at end of roof-opening radii towards centre of vehicle.


#### Notes:

- ♦ At no point should the sun roof panel be higher than the roof at the front, or lower at the rear.
- ♦ To adjust the height, always move sun roof forwards from open position.

→ Vehicles with aluminium panel

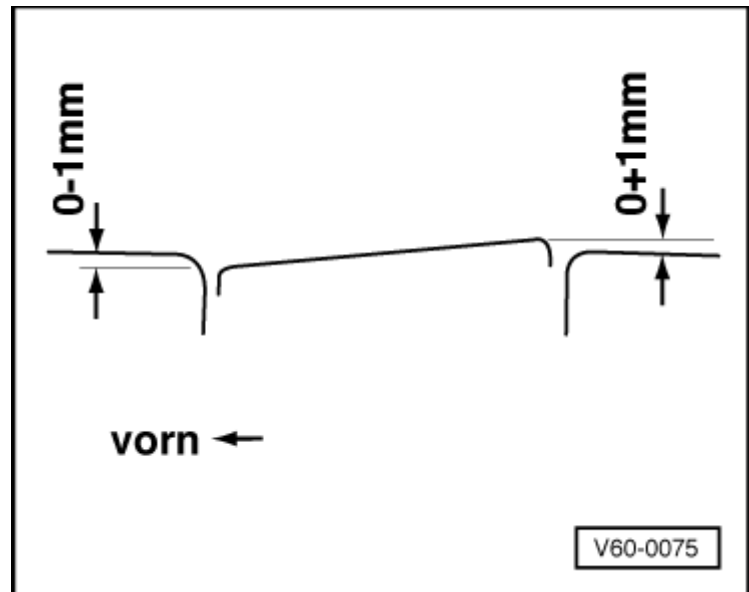

→ Vehicles with glass or solar panel

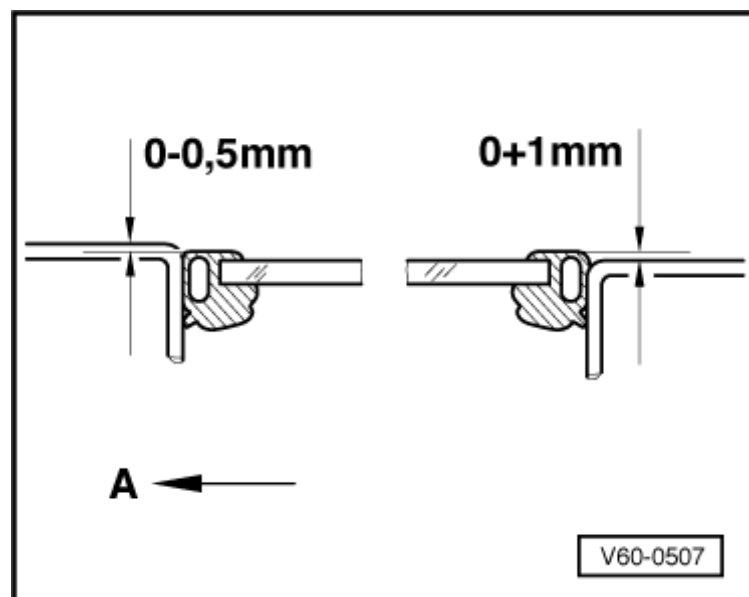

- – → To adjust height at front, loosen screws -1- and -2- (4.5 Nm).
- – To adjust height at rear, loosen bolts -2- and -3- (4.5 Nm).
- – Adjust the height as shown in illustration on Page [60-19](#).

