

## Removing and installing vibration damper

### Removing

- Removing and installing poly V-belt → [Chapter](#).



#### Note

Central bolt does not have to be loosened when removing vibration damper.



- Slacken 8 securing bolts -1- and remove vibration damper from crankshaft.

### Installing

Installation is carried out in the reverse order; note the following:

- On installation, make sure notch -arrow - in vibration damper is aligned with locating lug on toothed belt sprocket.
- Install poly V-belt → [Chapter](#).

### Tightening torque

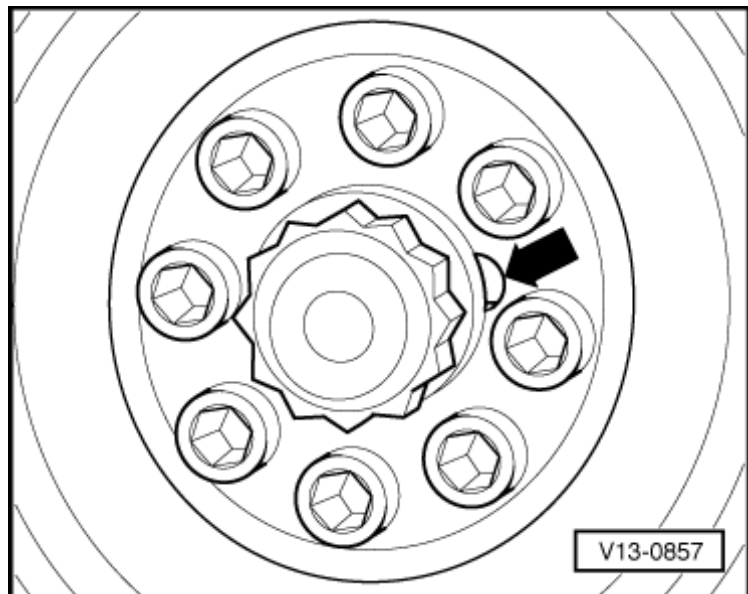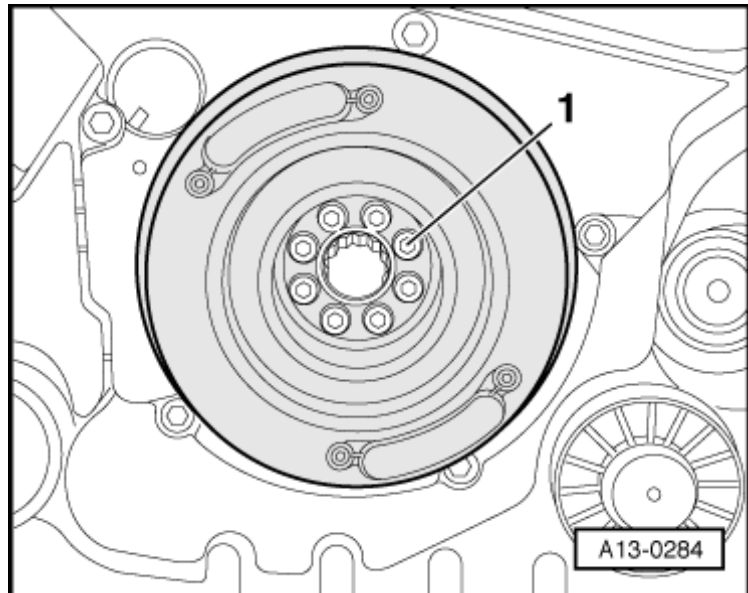

Component	Nm
Vibration damper to crankshaft sprocket	22