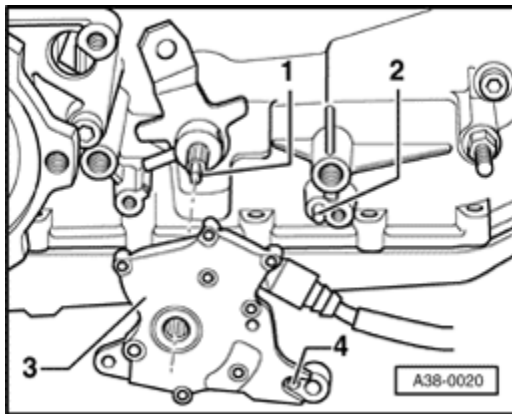


Audi > D2 > 1997-2003**5 Spd. Automatic Transmission 01L All Wheel Drive****37 - Automatic Transmission - Controls, Housing****Multi-function Transmission Range (TR) switch F125 , replacing****Removing**

- Remove left transmission support ⇒ [Transmission supports, \(right and left\), removing and installing](#) .
- Disconnect multi-function transmission range (TR) switch F125 from transmission and pull off of selector shaft.

Installing

- Attach multi-function transmission range (TR) switch F125 to the selector shaft. The flat section on gearing in switch - **3** - must come to rest on flat section of selector shaft - **1** - .

Note:

- ♦ *Center multi-function transmission range (TR) switch F125 to the selector shaft. Do not tilt and do not use excessive force. This may damage switch contacts.*
- Rotate switch until locating hole - **4** - on switch housing can be slid over installed pin - **2** - on transmission housing.
- Install left side transmission support ⇒ [Transmission supports, \(right and left\), removing and installing](#) .

Tightening torques

| Component | Tightening torque |
|-----------|-------------------|
| | |

| | |
|---|-------|
| Multi-function transmission range (TR) switch F125- to transmission | 8 Nm |
| Transmission support to transmission | 42 Nm |
| Transmission mounting to subframe | 40 Nm |

Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: