

## Repairing driver's airbag

### Removing and installing self-cancelling ring with coil connector and slip ring07.97ä

#### Important

- ◆ **Observe safety precautions for working on airbag =>**
- ◆ **Steering wheel and self-cancelling ring with coil connector and slip ring are only to be removed with wheels facing straight ahead.**

- Removing airbag unit => Page [69-83](#).
- Remove steering wheel => Page [69-87](#).
- Detach steering-column switch trim => Page [68-11](#).

- → Detach connector -1-.
- Release hooks -arrows- and detach self-cancelling ring with coil connector and slip ring from steering-column switch.

#### Important

**Do not turn self-cancelling ring with slip ring once it has been removed.**

#### Note:

Self cancelling ring with coil connector and slip ring is secured as a new part in the centre position with a cable tie.

