

Central locking system self-diagnosis 07.96 ä

Standard coding for vehicles 18.00 ä

Standard code = 15178

The standard code is the sum total of the following:		
- Radio remote control is activated	+	8192
- Hazard warning lights flash on opening/unlocking via radio remote control	+	4096
- Hazard warning lights flash on closing/locking via radio remote control	+	512
- Window lifter logic, USA	+	2048
- Tailgate/boot lid logic (ATW)	+	256
- Comfort closing/locking via radio remote control	+	64
- Anti-theft alarm (ATW) is activated	+	8
- Hazard warning lights flash on activating anti-theft alarm	+	2
Total (Code):	=	15178

Note:

The coding for vehicles as of CW 18/00 also contains modified door or window lifter logic. As soon as the driver's door is opened when "terminal 15 off", no window lifters can be actuated.

Coding options for vehicles ä 06.97

High security central locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) (Standard code + 4)		10188
Automatic locking	Coding	
- Automatic locking as of approx. 15 km/h (Standard code +32)	10216	
High security central locking and automatic locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) - Automatic locking as of approx. 15 km/h (Standard code +4+32)		10220
No sounding of horn	Coding	
- No sounding of horn on anti-theft alarm activation (Standard code -1024)	9160	

Coding options for vehicles 07.97 ä

High security central locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) (Standard code + 4)		13134
Automatic locking	Coding	
- Automatic locking as of approx. 15 km/h (Standard code +32)	13162	
High security central locking and automatic locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) - Automatic locking as of approx. 15 km/h		

(Standard code +4+32)

13166

Coding options for vehicles 18.00 ä

High security central locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) (Standard code + 4)		15182
Automatic locking	Coding	
- Automatic locking as of approx. 15 km/h (Standard code +32)	15210	
High security central locking and automatic locking		Coding
- Individual door unlocking and tailgate/boot lid relocking with radio remote control (SCL) - Automatic locking as of approx. 15 km/h (Standard code +4+32)		15214

- Starting central locking system self-diagnosis => Page [01-92](#).

→ Indicated on display

Rapid data transfer HELP
Select function XX

- Enter "07" for the function "Encode control unit" and confirm entry with Q key.

→ Indicated on display

Code control unit Q
Enter code number XXXXX (0 - 32000)

- Enter 5-digit control unit code in with table. Fill empty spaces with 0 (Example: 13166).
 - Standard coding or coding options; Coding control unit => Page [01-114](#).

→ If adjacent display appears (example):

Code control unit Q
Enter code number 13166 (0 - 32000)

- Confirm entry with Q key.

→ The display on the fault reader V.A.G 1551 will show the control unit identification code (example).

- Press ☐ key.

8L0862257E CL-Pump D04 ☐
Code 13166 WSC 12345

→ Display function selection:

Rapid data transfer HELP
Select function XX