

Exterior mirror


Removing and installing exterior mirror

- → Unclip trim -5- from door subframe.
- Detach seal -6-.
- Wind door window fully down.

Note:

On vehicles with mirror memory, front door trim must be removed before detaching connector.

=> General Body Assembly, Interior; Repair group 70: Front door trim: Removing and installing front door trim

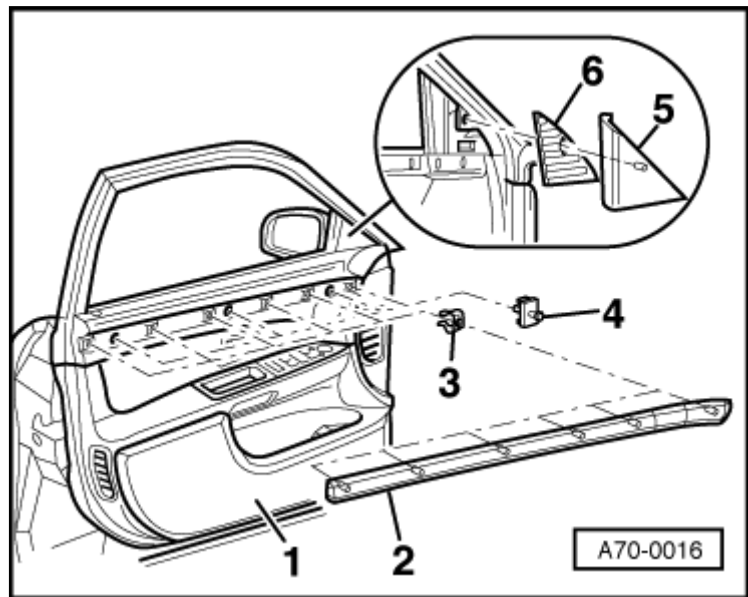

- → Unscrew bolt -1- together with washer -2- (8 Nm).
- Lift out exterior mirror -4- behind window slot seal and window guide.
- Also lift off seal -3-
- Detach connector.
- When installing, align exterior mirror to window channel.

