


Exterior mirror

Renewing electric adjuster


Note:

On vehicles with mirror memory, electric adjuster cannot be renewed separately.


- Switch off ignition.
- Removing mirror glass => Page [66-20](#).
- → Unscrew 3 bolts -1- (1 Nm).
- Detach electric adjuster -2-.

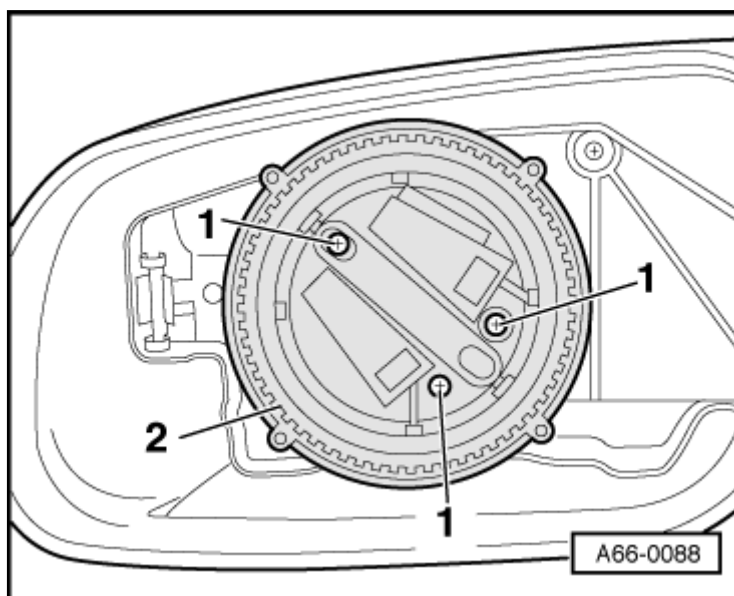

- → Detach cover -1- from electric adjuster -2-.

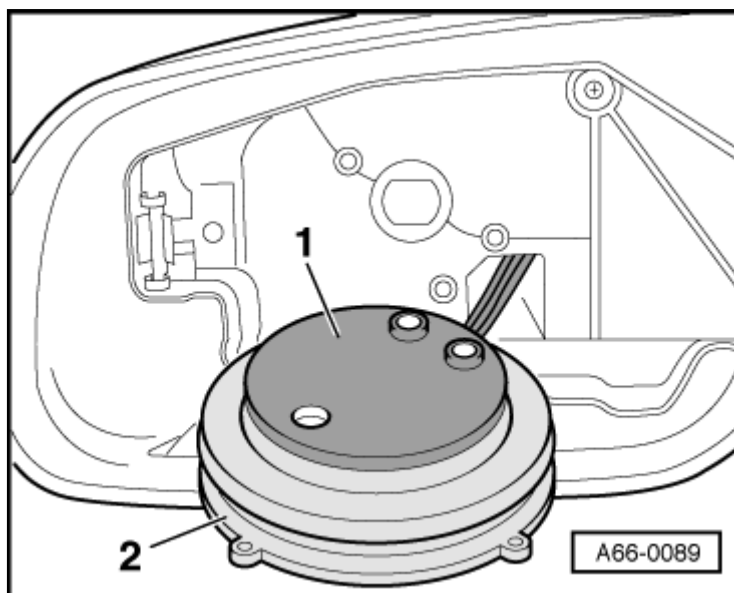


- → Cut through wires right next to soldered joints -arrows-.

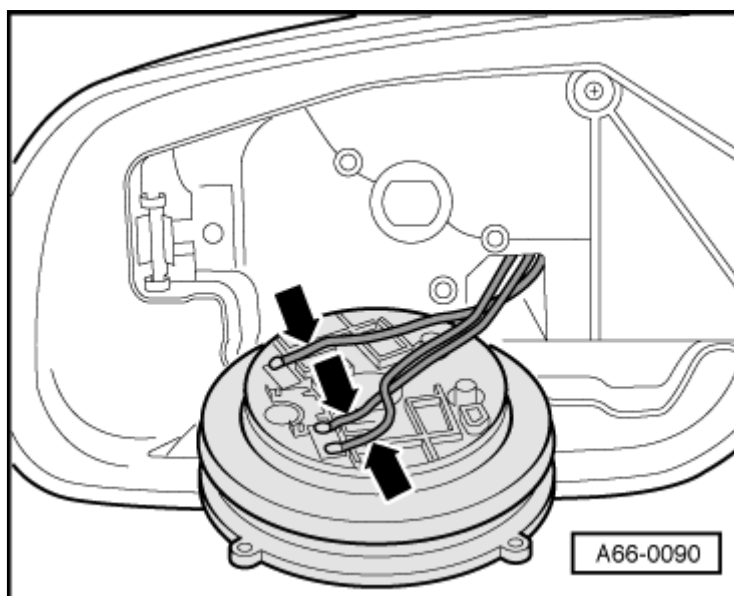

→ Scope of adjuster replacement parts

- 1 - Adjuster
- 2 - Cable connector
- 3 - Connector housing

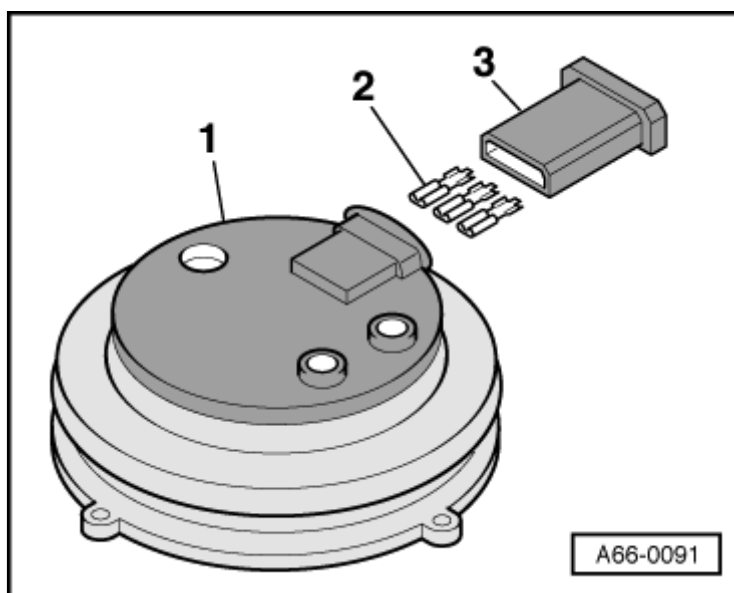

- → Install wires in the connector housing that is enclosed with replacement part.
 - Contact 1 - Red wire
 - Contact 2 - Brown/white wire
 - Contact 3 - White wire

Note:

Arrow points towards chamfer on connector housing.

