

Exterior mirror


Removing and installing exterior mirror glass

Special tools, testers and auxiliary items required

- Special tool 80-200

Removing

- Mask mirror housing.

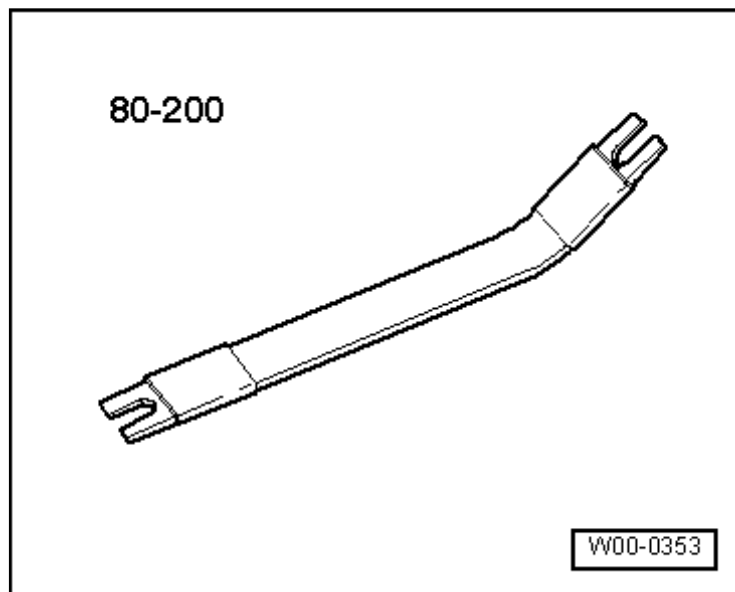


- → Use special tool 80-200 or thin plastic wedge to carefully lever off mirror glass first at the bottom and then at the top.
- Unplug connectors.

Installing

Important
Always wear protective gloves when installing mirror glass.

- Attach connectors.

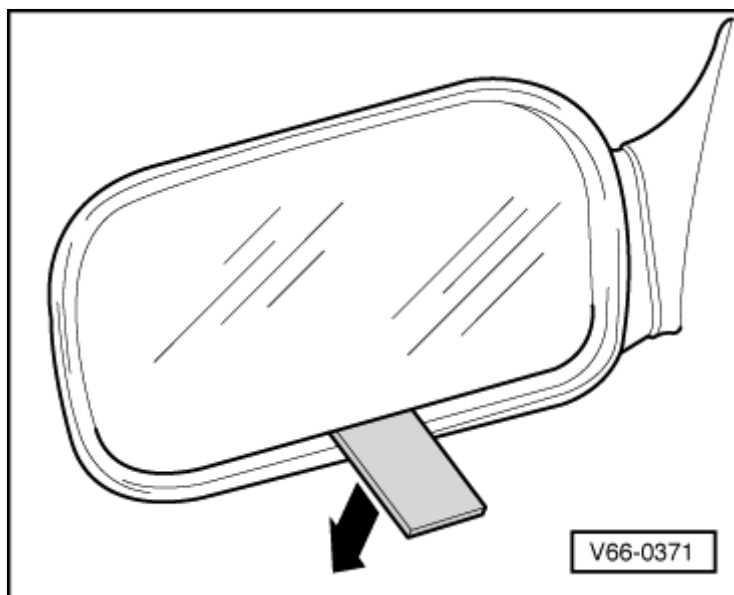

- → The friction lug on the mirror glass -2- must be inserted into the friction spring in the housing -1- when inserting the mirror glass.
- Press mirror glass into place.

Note:

Only exert pressure in centre of glass.

