

Exterior mirror

Removing and installing housing for exterior mirror

- Removing mirror glass => Page [66-20](#).
- → Unscrew screws -4- (2 off on driver's side, 1 off on passenger's side).
- Push back lugs -2- and remove cover -3-.
- Unscrew screws -1- (3 off on driver's side, 2 off on passenger's side).
- Lift off housing -5-.

