


Exploded view - exterior mirror

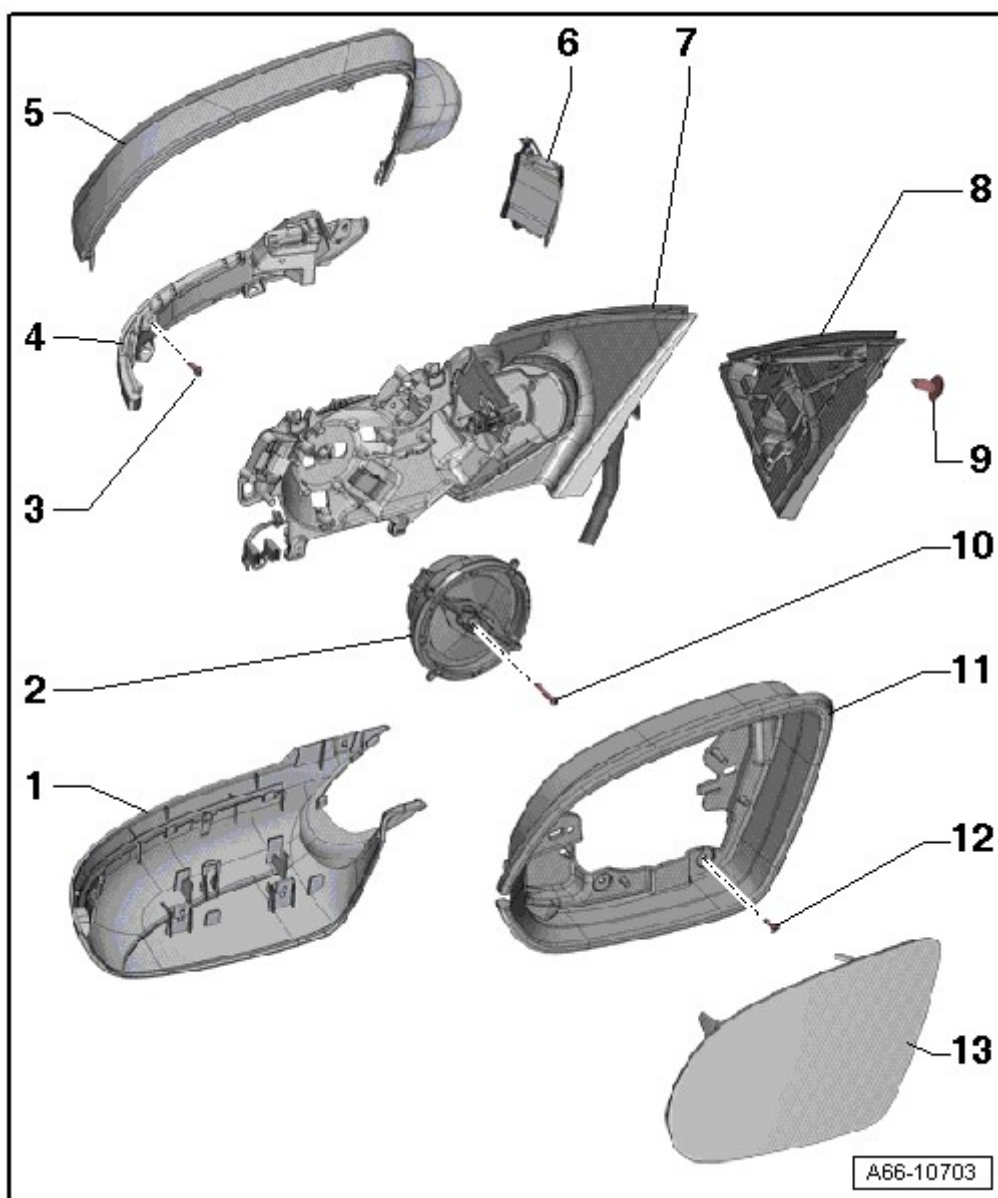

1 - Cover (bottom)

q For exterior mirror

q Removing and installing → [Chapter](#)

2 - Mirror adjustment unit

q Removing and installing → [Chapter](#)

3 - Bolt

q Tightening torque → [Electrical system; Rep. gr.94; Lights in exterior mirror; Exploded view - lights in exterior mirror](#)

4 - Turn signal repeater bulb in exterior mirror

q Removing and installing → [Electrical system; Rep. gr.94; Lights in exterior mirror; Removing and installing turn signal repeater bulb L131/L132](#)

5 - Cover for mirror

q Removing and installing → [Chapter](#)

6 - Lane change assist warning lamp in exterior mirror

q Removing and installing → [Electrical system; Rep. gr.96; Lane change assist; Removing and installing lane change assist warning lamp in exterior mirror K233/K234](#)

7 - Exterior mirror

q Removing and installing → [Chapter](#)

8 - Seal

9 - Bolt

q 3x

q 10 Nm

10 - Bolt

q 1 Nm

11 - Mirror trim

q Removing and installing → [Chapter](#)

12 - Bolt

q 4x

q 1 Nm

13 - Mirror glass

q Removing and installing → [Chapter](#)