Service.





AUDI A8 '03 - Distributed Functions

Self Study Programme 288

f terms twork (topoloav) Function master	un servidore constant of the Alatich the functions and surface in the	y provides a general outline of the average and the control units filted in the vehicle always responsible for the entire sequence c ed by way of data bus systems. Observations. The function master control units filted in the vehicle always are control out the sequence control out the sequenc	gathers all input information. The requests mes clear which bus systems are resulting from this are then transmitted in th	control units to exchange data. form of a message on the data bus system and read into the control units concerned fo	functions corresponding actuation of the appropriate connected components.	dicates that several control units to exchance information in order Substitute master	nt a function.	In the event of function master failure affect ing major functions, the task of the function	master is assumed by a control unit provide. for this purpose and designed to maintain th	sequence of operations (possibly with certai restrictions).	iper speed 1 function		3	J400		E22	J527	Ignition ON	J518 SSP288_013		tched on by way of electric 2 The steering column electronics transmit	rter switch or Advanced Key, so the information "Wiper speed 1" to the or start authorisation control unit onboard power supply control unit J519.	its terminal 15 and 75x – infor- convenience CAN. 3 The onboard power supply control unit	mittent wiper switch E22 via the LIN to the wiper motor control units information "Wiper speed 1" J400.	aering column electronics The Wiger motor control unit actuates
ins explanatory notes to Definition certain terms, designations is Self Study Programme. Data bus n	The test is the formation of the test of t	ogrammes: way in the way in whi bgrammes: are interior	3 Technical Features Bus Systems – It thus bec	T, Bluetooth TM 3 Electrical Components	Distributed Distributed	3 Infotainment This term i are require	to impleme	0 IS		er is used to tte the information	ce described in the Example: V onding text.	en circle symbolises t of an information	Ce.	en arrow indicates	formation.		e arrow indicates information.		out of the individual nents such as control witches or control ele-	as illustrated corre- to the actual sment in the vehicle. Prerequisit	nent designations are ed on the basis of their	ers in the relevant text. that entry <i>i</i>	J518 transı nents marked in red mation – to sebe function master	a sequence of transmit	10 The S
This introduction conta clarify the meanings of and symbols used in th	Mara datailad informat	following Self Study Pr	 SSP 282 – Audi A8 (SSP 286 – New Data 	LIN, MOS - SSP 287 - Audi A8 (SSP 289 – Adaptive Audi A8 '(– SSP 293 – Audi A8 '(Components and symb		A numl design	corresp	The greater the sta	seduer	Тhе ат	input in		The blu output		The lay compo units, s	sponds sponds arrangi	Compo explain	identifi	Compo indicat	within	
tudy Programme contains n on data bus networking and distributed functions in the	ë	tanding of the interaction of the ts and distributed functions forms	ary basis for successful วย.					Z Convenience CAN	Z Drive system CAN	Adaptive cruise control CAN	Z Dash panel insert CAN	MOST bus	TIN bus	Diagnosis CAN	Bidirectional wire	 Reception wire 	 Transmission wire 	Discrete wire	Wireless transmission – transmission signal	 Wireless transmission reception signal 	Follow-up function	Prerequisite			
This Self St information (topology)	Audi A8 '03	An underst component	the necess fault-findin			Wiring	n																		

Components marked in yel-low indicate the substitute master(s).

Contents

Page

. 4

1 million		J	6	11110
	6) —	2	
	K	~	Ž	ξ

Distributed Functions

Introduction

The Self Study Programme contains information on design features and functions.

The Self Study Programme is not intended as a Workshop Manual. Values given are only intended to help explain the subject matter and relate to the software version applicable at the time of SSP compilation.

Use should always be made of the latest technical publications when performing maintenance and repair work.

New

Attention Note



Introduction



Bus topology







Switch/display illumination dimming



SSP288_018

Prerequisite

Ignition switched on by way of electric ignition/ 4 starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminals 15 and 75 to convenience CAN.

- The driver sets the light switch E1 to "Dipped beam ON" position. The light switch transmits a voltageencoded signal to the onboard power supply control unit J519.
- 2 The onboard power supply control unit transmits the information "Dipped beam ON" to the convenience CAN.
- 3 The data bus diagnostic interface J533 transmits the information via the dash panel insert CAN to the control unit with display in dash panel insert J285, where the CAN information "Term. 58s" is generated.

- 4 The dash panel insert transmits the information "Term. 58s" via the dash panel insert CAN to the data bus diagnostic interface.
- 5 The data bus diagnostic interface transmits this signal to the convenience CAN and the MOST bus. Each connected control unit uses this message to generate a PWM signal for actuation of the connected illumination systems with the set level of dimming.

Right turn signal



Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminal 15 to convenience CAN.

 The driver sets the turn signal switch E2 to the right. The switch transmits a resistance-encoded

signal to the steering column electronics control unit J527.

- 2 The steering column electronics control unit relays the information "Right turn signal" via the convenience CAN to the convenience system central control unit J393.
- 3 The convenience system central control unit establishes priorities and type of indication on the basis of the information received.
 The convenience system central control unit then transmits the information "Right turn signal" to the convenience CAN.

- 4 The convenience system central control unit actuates the rear right turn signal indicator by way of the right tail light control unit J691 and the onboard power supply control unit J519 actuates both the front right turn signal bulb M7 and the right side turn signal bulb M19.
- 5 The data bus diagnostic interface J533 passes the CAN information "Right turn signal" to the dash panel insert CAN. The lamp in the dash panel insert then flashes.
- 6 The trailer turn signal indicator is actuated by the trailer detector control unit J345 which received the message "Right turn signal".



Crash signalling (without airbag triggering)





- One or more crash sensors (G256, G257, G283, G284, G435 or G436) transmit(s) the information "Vehicle crash" to the airbag control unit J234.
- 2 The information "Crash" is relayed by the airbag control unit via a discrete wire to the convenience system central control unit J393 and the drive system CAN.
- The information is processed by the convenience system central control unit and the message "Crash detected" passed to the convenience CAN.
 The convenience system central control unit blocks remote controlled locking.
- 4 The door control units J386 to J389 then actuate the central locking lock units F220 to F223. All doors are unlocked. The door control units block door locking by the interior locking switches.
- 5 The onboard power supply control unit J519 actuates the front turn signal bulbs M5, M7 and the side turn signal bulbs M18, M19.
- 5a The convenience system central control unit actuates the tail light control units J690 and J691 to implement the rear signalling function.
- 6 The sunroof electronics control unit J528 switches on the interior lighting.
- 7 The additional heater control unit J364 switches the auxiliary heater to run-on mode.

Hazard warning





SSP288_012

- 1 The driver actuates the hazard warning light switch E3, which transmits the discrete information "Hazard warning" to the onboard power supply control unit J519.
- 2 The onboard power supply control unit transmits the information "Hazard warning" via the convenience CAN to the convenience system central control unit J393.
- 3 The convenience system central control unit specifies the type of indication and transmits the information "Hazard warning mode" to the convenience CAN.
- 4 The onboard power supply control unit J519 actuates the front turn signal bulbs M5 and M7 as well as the side turn signal bulbs M18 and M19. The convenience system central control unit actuates the rear turn signal bulbs (M6 and M8) via the tail light control units J690 and J691.
- 5 The data bus diagnostic interface J533 actuates the hazard warning indicator lamps in the dash panel insert display via the dash panel insert CAN.



Anti-theft alarm flashing function

Prerequisite

Anti-theft alarm activated by "Central locking system locking".

Interior monitoring/anti-towaway system not deactivated by buttons in driver's door.

1a The interior monitor transmission and reception module integrated into the sunroof electronics control unit J528 detects movement in the passenger compartment.

This information is transmitted by the sunroof electronics control unit to the convenience CAN.

or

1b The anti-theft/tilt system control unit J529 transmits the information "Tilt alarm" via the LIN to the convenience system central control unit J393.

- 2 The convenience system central control unit specifies the type of indication and transmits the information "Alarm flashing mode" to the convenience CAN.
- 3 The onboard power supply control unit J519 actuates the front turn signal bulbs M5, M7 and the side turn signal bulbs M18, M19. The convenience system central control unit actuates the rear indicators via the corresponding tail light control units J690 and J691.
- 4 The data bus diagnostic interface J533 actuates the alarm indicator lamps in the dash panel insert display via the dash panel insert CAN.
- 5 The convenience system central control unit actuates the alarm horn H12 via a bidirectional wire.

Advanced Key unlocking





SSP288_004

- The driver grasps hold of the recessed door 9 handle moulding. The driver side exterior door handle touch sensor G415 transmits the information "Finger in handle moulding" to the entry and start authorisation control unit J518.
- 2 The control unit transmits the information "Key interrogation" to the driver side and rear driver side entry and start authorisation aerials R134 and R155.
- 3 The driver side entry and start authorisation aerials transmit this information to the vehicle key outside the vehicle.
- 4 The vehicle key transmits the information "Key identification" to the central locking and anti-theft alarm system aerial R47.
- 5 The central locking and anti-theft alarm system aerial transmits this information to the entry and start authorisation control unit.
- 6 The entry and start authorisation control unit transmits the information
 "Convenience unlocking" to the convenience system central control unit J393 and to the door control unit for the door handle at which key interrogation was started.
- 6a The door control unit receiving the command from the entry and start authorisation control unit, actuates the lock unit, which unlocks the door.
- 7 The convenience system central control unit transmits the information "Vehicle unlocking – Advanced Key" to the convenience CAN.
- 8 The door control units J386 to J389 evaluate the information "Advanced Key unlocking" and actuate the central locking lock units F220 to F223. The doors are unlocked.

- 9 The central locking actuators F131 to F134 in the central locking lock units transmit the information "Doors unlocked" to the door control units.
- 10 The door control units transmit the information "Doors unlocked" to the convenience system central control unit.
- 11 The convenience system central control unit transmits the information "Vehicle not locked" to the convenience CAN.
- 12 The sunroof electronics control unit J528 starts the function "Interior lighting ON".
- 13 The convenience system central control unit transmits the information "Flashing after central locking unlocking" to the convenience CAN.
- 14 The data bus diagnostic interface J533 actuates the flash indicator lamps in the dash panel insert display via the dash panel insert CAN.
- 15 The convenience system central control unit actuates the rear indicators via the tail light control units J690 and J691 for two flashing cycles. The onboard power supply control unit J519 actuates the front turn signal bulbs M5, M7 and the side turn signal bulbs M18, M19 for two flashing cycles.



Advanced Key locking





- The driver presses the driver side outer door handle central locking button E369. The button transmits the information "Lock vehicle" by way of a discrete wire to the driver side door control unit J386, which in turn transmits the signal via the convenience CAN to the entry and start authorisation control unit J518.
- 2 The control unit transmits the information "Key interrogation" to the driver side and rear driver side entry and start authorisation aerials R134 and R155.
- 3 The driver side entry and start authorisation aerials transmit this information to the vehicle key outside the vehicle.
- 4 The vehicle key transmits the information "Key identification" to the central locking and anti-theft alarm system aerial R47.
- 5 The central locking and anti-theft alarm system aerial transmits this information to the entry and start authorisation control unit.
- 6 The entry and start authorisation control unit transmits the information "Lock" to the convenience system central control unit J393.
- 7 The convenience system central control unit transmits the information "Lock vehicle – Advanced Key" to the convenience CAN.
- 8 The door control units J386 to J389 evaluate the information "Lock" and actuate the central locking lock units F220 to F223. The doors are locked and the locks isolated.
- 9 The central locking actuators F131 to F134 in the central locking lock units transmit the information "Doors locked and locks isolated" to the door control units.

- 10 The door control units transmit the information "Doors locked and locks isolated" to the convenience system central control unit.
- 11 The convenience system central control unit transmits the information "Vehicle locked" to the convenience CAN.
- 12 The sunroof electronics control unit J528 starts the function "Interior lighting OFF".
- 13 The convenience system central control unit transmits the information "Flashing after central locking system locking" to the convenience CAN.
- 14 The data bus diagnostic interface J533 actuates the flash indicator lamps in the dash panel insert display via the dash panel insert CAN.
- 15 The convenience system central control unit actuates the rear indicators via the tail light control units J690 and J691 for two flashing cycles. The onboard power supply control unit J519 actuates the front turn signal bulbs M5 and M7 as well as the side turn signal bulbs M18 and M19 for two flashing cycles.

For greater clarity, the handles of the passenger's and rear doors are not shown. Operation by way of these buttons is the same as for the driver's door.



Automatic boot lid release





- a) Release via button in driver's door
- 1a The driver presses the boot lid remote release button E463, which transmits the discrete information "Release boot lid" to the driver side door control unit J386.
- 2a The driver side door control unit transmits the information "Release boot lid" via the convenience CAN to the convenience system central control unit J393.
 - Sequence continues with Item 4 -

- b) Release via button in boot lid (handle cover strip)
- 1b The driver presses the release button for boot lid lock cylinder F248, which transmits the discrete information "Release boot lid" to the convenience system central control unit.
 - Sequence continues with Item 4 -



c) Release via button in vehicle key

- 1c The driver presses the "Boot lid" button in the vehicle key, which transmits a radio signal to the central locking and anti-theft alarm system aerial R47.
- 2c The "Release boot lid" signal is received by the central locking and anti-theft alarm system aerial and transmitted via a discrete wire to the entry and start authorisation control unit J518.
- 3c The entry and start authorisation control unit transmits the information "Release boot lid" via the convenience CAN to the convenience system central control unit.
- 4 The convenience system central control unit actuates the boot lid release motor V139.
- 5 The button in the boot lid release motor transmits the information "Boot lid released" to the convenience system central control unit.
- 6 The convenience system central control unit transmits the information "Release boot lid" via the LIN to the boot lid control unit J605.
- 7 The convenience system central control unit actuates the boot lid power latching system motor V278. The striker pin moves upwards.
- 8 The power latching system limit switch, luggage compartment unlocked F332 transmits "Striker pin up" to the convenience system central control unit, which stops the boot lid power latching system motor.

Left parking light





Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminal P to convenience CAN. Light switch E1 set to OFF position.

- 1 The driver sets the turn signal switch E2 to the left. The switch transmits a resistance-encoded signal to the steering column electronics control unit J527.
- 2 The steering column electronics control unit transmits the information "Left parking light" via the convenience CAN to the onboard power supply control unit J519.
- 3 The onboard power supply control unit transmits the information "Left parking light active" to the convenience CAN.

- 4 The convenience system central control unit J393 actuates the left tail light control unit J690 and the tail light control unit for lights on left in boot lid J692 via a discrete wire.
- 4a The information "LED lighting 10 %" is transmitted via a bidirectional wire to the tail light.
- 5 The onboard power supply control unit actuates the left parking light bulb M43.
- 6 The data bus diagnostic interface J533 passes the CAN information "Parking light" to the dash panel insert CAN. The warning buzzer in the dash panel insert sounds as soon as the driver's door contact switch passes the information "Door OPEN" via the door control unit to the dash panel insert CAN.

Dipped beam



Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminal 15 to convenience CAN.

- 1 The driver sets the light switch E1 to "Dipped beam ON" position. The light switch transmits a voltage-encoded signal to the onboard power supply control unit J519.
- 2 The onboard power supply control unit transmits the information "Dipped beam ON" to the convenience CAN.

- 3 The convenience system central control unit J393 actuates the LEDs in the tail light control units J690, J691, J692 and J693 via discrete wires. The two number plate lights X are also actuated.
- 3a The information "LED lighting 10 %" is transmitted via a bidirectional wire to the tail lights.
- 4 The onboard power supply control unit actuates the left and right parking light bulbs M43, M44 and the left and right dipped beam bulbs M29, M31.
- 5 The data bus diagnostic interface J533 transmits the information via the dash panel insert CAN to the control unit with display in dash panel insert J285, where the CAN information "Term. 58s" and "Term. 58d" is generated. This information is required for switch and display illumination.



Dipped beam (automatic)



Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminals 15 and 75 to convenience CAN.

- 1 The driver sets the light switch E1 to position AUTO "Automatic dipped beam".
- 2 The rain and light detector sensor G397 connected to the sunroof electronics control unit J528 relays the signal "Light ON" detected to the sunroof electronics control unit.
- 3 The information "Light ON" is conveyed via the convenience CAN to the onboard power supply control unit J519.
- 4 The onboard power supply control unit transmits the information "Dipped beam ON" to the convenience CAN.

- 5 The convenience system central control unit J393 actuates the LEDs in the tail light control units J690, J691, J692 and J693. The two number plate lights X are also actuated.
- 5a The information "LED lighting 10 %" is transmitted via a bidirectional wire.
- 6 The onboard power supply control unit actuates the left and right parking light bulbs M43, M44 and the left and right dipped beam bulbs M29, M31.
- 7 The data bus diagnostic interface J533 transmits the information via the dash panel insert CAN to the control unit with display in dash panel insert J285, where the CAN information "Term. 58s" and "Term. 58d" is generated. This information is required for switch and display illumination.



Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 connects terminal 15 to convenience CAN.

- 1 The information "Reverse gear" is transmitted by way of a contact at the automatic gearbox control unit J217 via the drive system CAN to the data bus diagnostic interface J533.
- 2 The data bus diagnostic interface transmits the information "Reverse gear" to the convenience CAN.
- 3 The onboard power supply control unit J519 transmits the information "Reversing light switch ON" to the convenience CAN.

- 4 The convenience system central control unit J393 discretely actuates the left M16 and right M17 reversing light bulbs.
- 5 The sunroof electronics control unit J528 deactivates the automatic folding mechanism of the right interior mirror.
- 6 The parking aid control unit J446 activates the rear parking aid.
- 7 The driver side door control unit J386 transmits the information "Mirror selection right" from the mirror adjustment changeover switch E48 to the convenience CAN.
- 8 The front passenger side door control unit J387 moves the exterior mirror into low position.

Wiper speed 1





Prerequisite

Ignition switched on by way of electric ignition/ starter switch or Advanced Key, so that entry and start authorisation control unit J518 transmits terminal 15 and 75x – information – to convenience CAN.

- 1 The intermittent wiper switch E22 transmits the information "Wiper speed 1" to the steering column electronics control unit J527.
- 2 The steering column electronics transmits the information "Wiper speed 1" to the onboard power supply control unit J519.
- 3 The onboard power supply control unit transmits the information "Wiper speed 1" via the LIN to the wiper motor control unit J400, which actuates the integrated motor.

Flick wipe with headlight washing



Prerequisite

Ignition switched on by way of electric ignition/starter switch or Advanced Key, so that entry and start authorisation control unit J518 transmits terminal 15 and 75x – information – to convenience CAN.

- The driver sets the light switch E1 to dipped beam.
 The onboard power supply control unit J519 transmits the information "Dipped beam ON" via the convenience CAN to the onboard power supply control unit 2 J520.
- 2 The driver sets the intermittent wiper switch E22 to "Flick wash" position for more than one second.
 The switch outputs a voltage-encoded signal to the steering column electronics control unit J527.

- 3 The steering column electronics control unit transmits the information "Wash windscreen" to the convenience CAN.
- 4 The onboard power supply control unit J519 transmits the information "Windscreen washer pump ON" via the LIN to the wiper motor control unit J400.
- 5 The wiper motor control unit actuates the windscreen washer pump V5.
- 6 On the basis of the information "Wash windscreen" and "Dipped beam ON", the onboard power supply control unit 2 J520 actuates the pop-up washer jet motors V248, V249 and the headlight washer system pump V11 via the headlight washer system relay J39 after a delay of one second.





Interior light actuation



The distributed functions relating to interior light actuation are highly complex.

The functions are therefore split up here into three categories.

Basic functions:

- a) Manual interior light control (at corresponding light)
- b) Central brightening/dimming on opening/ closing doors
- c) Lighting profiles by way of "ambiente" lighting

Each basic function also contains certain special functions.

1 The driver presses the lighting profile button on the sunroof electronics control unit J528.

The signal is transmitted on the convenience CAN in line with the lighting profile preset in the MMI and the activated key.

After selection, the lighting profile is stored for each key recognised in the sunroof electronics control unit J528.

2 If necessary (depending on lighting profile), the sunroof electronics control unit relays the signal to the rear roof console, thus switching the rear roof console to standby mode.

The rear interior light is not switched in until the rear door contact switches are actuated.

All interior lights activated remain on until all door contacts signal "Doors closed" again.

a) Manual interior light control

Interior light control is always performed in the sunroof electronics control unit.

The operating elements are located at the front in the sunroof electronics control unit J528 and at the rear in the roof console. The functions of the two operating units are separate.

If the interior lighting is switched on manually with terminal 15 OFF, all interior lights and the make-up lights are switched off following last button actuation.

- 3 The onboard power supply control unit J519 conveys the signal received to the front left L151 and front right L152 footwell illumination, which is then switched on.
- 4 The door control units J386 to J389 actuate the appropriate door contour lights in the selected lighting profile.
- 5 The convenience system central control unit J393 actuates the rear left L106 and rear right L107 footwell illumination.

Special function: Brightness adjustment

Keeping the ON button at the interior light pressed for a lengthy period causes the corresponding interior light to be dimmed and brightened again until the button is released.

Briefly releasing the button only interrupts adjustment. After releasing the button, the corresponding brightness value is stored.

Special function: Control of rear lighting from front

The rear lighting is controlled by touching a front button twice. In other words: Front $1 \times ON =$ Front lighting on Front $2 \times ON =$ Front and rear lighting on



Special function: Transfer of brightness value to rear

Once the front brightness value has been set by keeping the button pressed once, the same brightness value can be transferred to the rear by pressing the button again.

If this value is not acceptable to the rear passenger, the value stored in the sunroof electronics control unit at the front can be restored by renewed pressing of the ON button at the rear roof console.

Special function: Childproof lock

If the childproof lock has been activated for both rear doors via the buttons in the driver's door, neither the interior lighting nor the rear and side roller blinds can be operated from the roof console. The rear roller blind can be operated from the front. It is however possible to activate the rear reading lights.

Sequence of operations:

The door control unit passes the message "Activate childproof lock" to the convenience CAN. This is read in by the sunroof electronics control unit J528. The control unit then blocks operation at the rear.



SSP288_021

b) Central brightness adjustment: Brightening and dimming on opening/ closing doors

On setting central locking to OPEN (remote control key or keyless entry)

The entire interior lighting

- Interior light
- Door contour lighting (optional)
- Footwell lighting

is brightened within 1.5 seconds to 100 %.

Special function:

If the vehicle automatically re-locks, dimming takes place at the same time. If a door is opened, dimming takes place after 10 minutes. After closing the door, dimming is implemented after 2 minutes if the ignition is not switched on.

On activating terminal 15, the interior lights are dimmed immediately. If a rear door is opened with terminal 15 active, the rear interior light only is in operation when the LED in the rear door contact button lights.

If a front door is opened with terminal 15 active, the front interior light only is in operation when the LED in the front door contact button lights.

If both a front and a rear door are opened with terminal 15 active, the front and rear interior lights come on when the LED in the corresponding door contact button lights.

Dimming however only takes place again when all doors have been locked.

Special function: Dimming

If a brightness value has been set for the corresponding light, it will be dimmed to this value after closing the doors.

If no door is opened, the interior lights are dimmed again and switched off after 2 minutes.



SSP288_021





c) Lighting profiles by way of "ambiente" lighting

The lighting profile functions are stored in the sunroof electronics control unit. The lighting profiles are selected via the MMI in the CAR menu under "Ambiente" lighting.

Following selection and confirmation via the rotary/pushbutton control, the lighting profile is displayed and the brightness value can be adjusted.

This value is stored in the sunroof electronics control unit on exit from the menu.

Special function: Lighting profile button

Whilst driving, the selected lighting profile can only be activated and deactivated by the driver via the lighting profile button.

As a general rule, the lighting profiles are only active with terminal 15 ON. Switching off the ignition causes the interior lights to be dimmed and switched off. If the lighting profile has been deliberately activated via the light button with terminal 15 ON, it remains active even with terminal 15 OFF and is only deactivated 30 minutes after leaving the vehicle.

Locking the vehicle results in immediate deactivation.



Operation via the interior light button as described under a) is still possible.



SSP288_023



SSP288_022

Driver identification





- 1 The vehicle key is to be inserted in the ignition/starter switch. The entry and start authorisation switch E415 is actuated.
- 2 The S-contact terminal signal is then transmitted to the entry and start authorisation control unit J518, which passes this information to the convenience CAN.
- 3 The "S-contact terminal" signal is applied to the driver identification control unit J589.

If a stored finger is then placed on the entry and start authorisation button E408, the driver identification control unit transmits the user ID to the convenience CAN. The control units involved with the memory system recognise the user ID and set the stored values.

No	tes	

288

All rights reserved. Subject to technical modification. Copyright* 2002 AUDI AG, Ingolstadt Department I/VK-35 D-85045 Ingolstadt Fax 0841/89-36367 000.2811.08.20 Technical status as at 09/02 Printed in Germany