

43 Self-leveling compressor inoperative

43 08 16 2018765/3 December 11, 2008. Supersedes Technical Service Bulletin Group 43 number 08-13 dated November 3, 2008 for reasons listed below.

Model(s)	Year	VIN Range	Vehicle-Specific Equipment
A6	2006 – 2009	All	Air Suspension
A8	2004 – 2009	All	
Audi Q7	2007 – 2009	All	

#### Condition

REVISION HISTORY					
Revision	Date	Purpose			
3	-	Revised Service			
2	11/3/2008	Revised Title to include Repair Group			

- The self-leveling system cannot be adjusted any more with the MMI.
- The compressor for the self-leveling system continues to run after switching off the engine and locking the vehicle.
- · One of the following DTCs may be stored:
  - DTC 0453 (restricted function through excess temperature).
  - DTC 1583 (leak in the system recognized).
  - DTC 1770 (sender for compressor temperature of self-leveling control G290).
  - DTC 1772 (signal cable of pressure sender for self-leveling control G291).
  - DTC 2645 (valves for self-leveling control).
  - · DTC 2646 (plausibility of self-leveling control).

### Technical Background

Because of poor performance or failure of the compressor for air suspension, the vehicle position cannot be adjusted. As a safeguard, the control module will lower the vehicle to the lowest position and illuminate the warning light. Drivability is not affected.

#### **Production Solution**

\_\_



#### Service

- 1. Use a direct current supply to check the compressor for the self-leveling system.
- 2. See the current flow diagram for the locations of the relay and the compressor.
- 3. Check the relay J403 of the compressor for the self-leveling system.
- Open the relay and assess the contacts. Compare them with the contacts of Figures 1 to 3.

Is the wear is similar, or are there burn marks in the housing?

If the relay resembles Figures 1 to 3, replace the compressor and relay J403 for the self-leveling system.

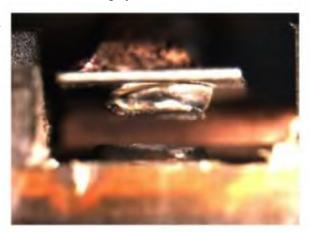


Figure 1. Strong erosion of both contacts.

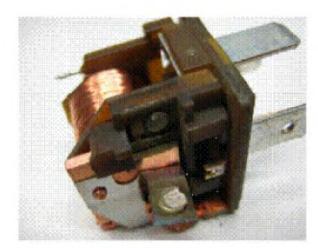


Figure 2. Strong erosion of both contacts.





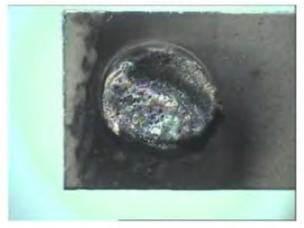


Figure 3. Strong erosion of the spring contact.

- Discoloring of the strand is also a clear indication of permanent operation of the compressor (Figure 4).
  - Replace the compressor and relay J403 for the self-leveling system.



Figure 4. Overheated strand.

6. If the contacts resemble those in Figure 5 and the compressor has a working noise similar to a comparable vehicle, replace only the opened relay J403 for the self-leveling system.



Figure 5. Contacts with minor marks; relay OK.



### Warranty

Claim Type:	Use applicable claim type. Vehicle may be outside any warranty, in which case this Technical Service Bulletin is informational only.					
Service Number:	4315					
Damage Code:	0040					
Labor Operations:	A6: Compressor remove and install  Central electronics cover R&I  Relay for suspension compressor R&I and inspect.	4315 1900 9793 1900 4315 1999	90 TU 70 TU 10 TU			
	A8: Compressor remove and install Shelf under dash panel R&I Relay for suspension compressor R&I and inspect	4315 1900 6818 1900 4315 1999	90 TU 50 TU 10 TU			
	Q7: Compressor remove and install Shelf under dash panel R&I Relay for suspension compressor R&I and inspect	4315 1900 6818 1900 4315 1999	70 TU 30 TU 10 TU			
Diagnostic Time:	GFF	0150 0000	20 TU			
	Road test prior to service procedure	No allowance	0 TU			
	Road test after service procedure	No allowance	0 TU			
	Technical diagnosis at dealer's discretion (Refer to Section 2.2.1.2 and Audi Warranty Online for DADP allowance details)					
Claim Comment:	As per TSB #2018765/3					

All warranty claims submitted for payment must be in accordance with the *Audi Warranty Policies and Procedures Manual*. Claims are subject to review or audit by Audi Warranty.

### Additional Information

All parts and service references provided in this TSB are subject to change and/or removal. Always check with your Parts Department and service manuals for the latest information.