

## Audi > A8/A8L > 2004-2008

### Electrical Equipment

### 92 - Removal and Installation

.

## Washer Fluid Reservoir

### Removing


- Switch off ignition and remove ignition key.
- Open filler connection of washer fluid reservoir.
- Pull circlip of cap for washer fluid reservoir off filler connection.
- Remove front right wheel.
- Remove rear section of front right wheel housing liner, refer to ⇒ Body Exterior - Repair Group 66 .

- Disconnect electrical connectors - **3** - and - **6** - .
- Remove hose connection - **5** - (press release button).
- Remove washer fluid line - **1** - at washer fluid pump.
- Remove screws - **arrows** - .

- Swivel washer fluid reservoir slightly to rear.
- Disconnect connector - **2** - at low washer fluid level sensor.
- Lower washer fluid reservoir slightly and pull sealing element - **4** - off filler neck.
- Remove washer fluid reservoir downward.

## Installing

Install in reverse order of removal, observing the following:

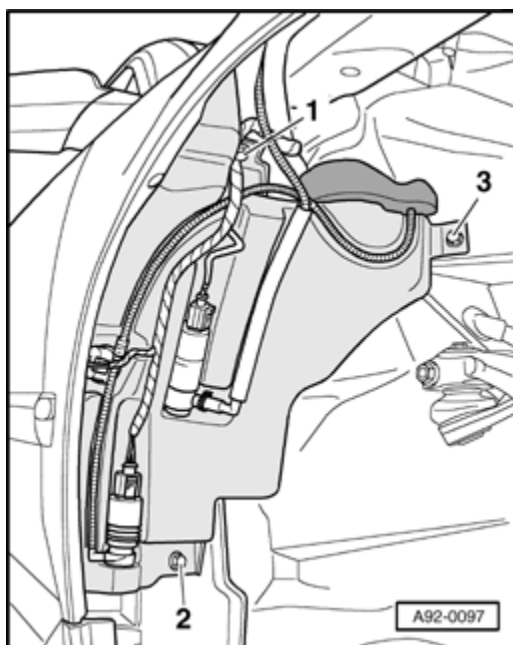

- Tighten screws in sequence - **1 to 3** - .

### Note:

- ♦ *Washer fluid hose must engage audibly into connection for washer fluid pump.*
- Install front right wheel housing liner, refer to ⇒ Body Exterior - Repair Group 66 .

## Tightening Specifications

Component	Nm
Washer fluid reservoir to body	7

Copyright © 2008 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: