

Audi > A8/A8L > 2004-2008

Electrical Equipment

94 - Removal and Installation

.

Exterior Mirror Turn Signal Lamps, from 09.07

Special tools, testers and auxiliary items required


- ♦ Pry Lever - Rmv Outside Mirror 80 - 200
- ♦ Protective gloves

Removing


CAUTION!

Risk of injury due to high voltage, injury risk and environmental hazard.


- ♦ **Wear protective gloves.**

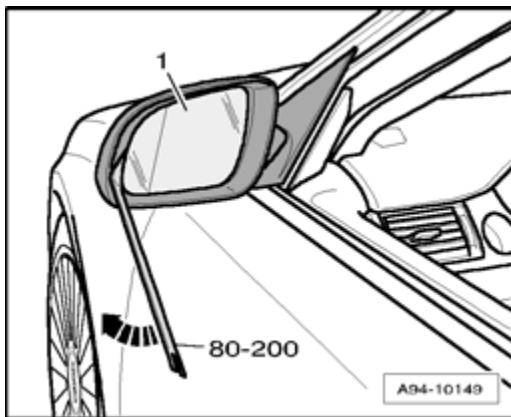

- Press mirror glass - **1** - out of mirror adjusting unit - **arrow** - using Pry Lever 80 - 200 .

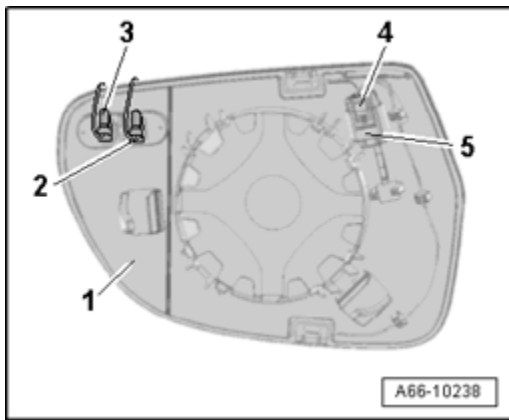


- Disconnect the electrical connectors - 2 - and - 3 - for mirror heating on the rear side of the mirror glass.
- Unclip the electrical connector from the bracket - 5 - , if applicable.
- Disconnect the electrical connector - 4 - .

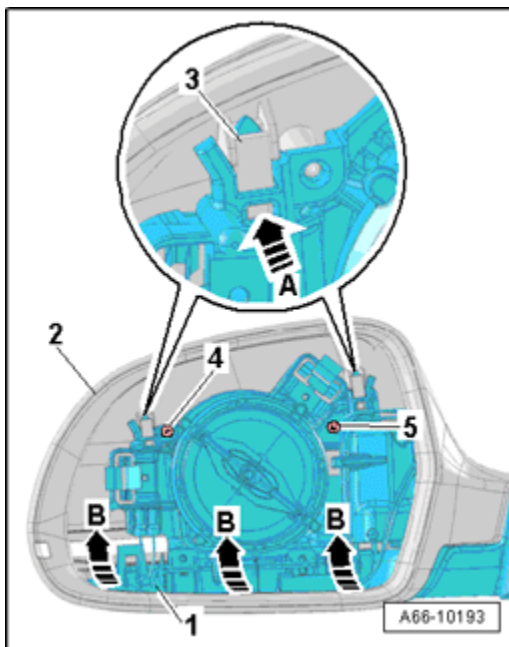

Note:

- ♦ *To protect the paint in the area around the mirror housing, tape it off with a soft cloth.*
- Remove the bolts - 4 - and - 5 - .
- Release the retaining tabs - 3 - in the - **direction of arrow A** - .
- Release the retaining clip - 1 - and remove the exterior rearview mirror housing from the cover - 2 - - **B arrows** - .


Vehicles with Audi side assist:

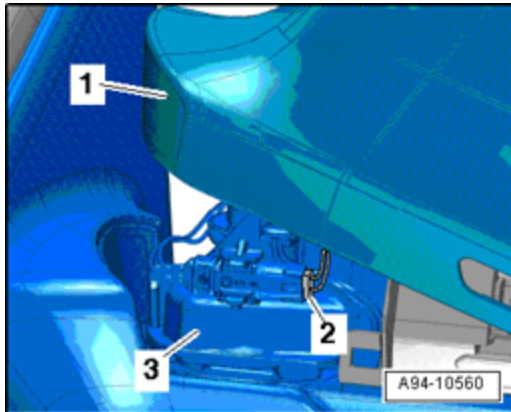

- Press the mirror adjusting unit down and pull the exterior rearview mirror housing - **1** - upward slightly.
- Disconnect the electrical connector - **2** - for the lane change assist warning lamp on the front side of the mirror adjusting unit mount - **3** - .

All Vehicles

- Press the mirror adjusting unit down and remove the exterior rearview mirror housing upward.

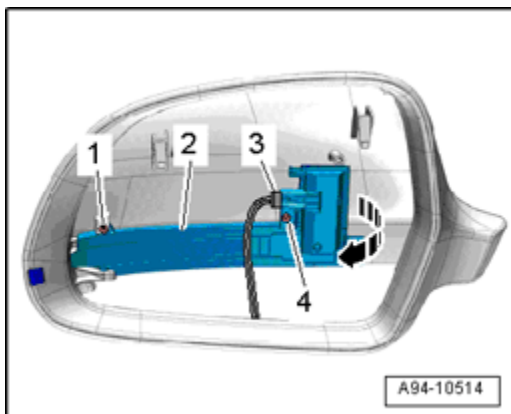

- Disconnect the electrical connector - **3** - for the exterior rearview mirror turn signal.
- Remove the bolts - **1** - and - **4** - .
- Tilt the turn signal housing - **2** - out of the exterior rearview mirror housing - **arrow** - .

Installing


- ♦ Tightening Specifications ⇒ [Exterior Rearview Mirror Turn Signals, from 09.07](#)

[Assembly Overview](#) and, refer to ⇒ Body Exterior - Repair Group 66 .

Install in reverse order of removal, observing the following:

Note:

- ♦ *The entire exterior mirror turn signal must be replaced if an LED is faulty.*

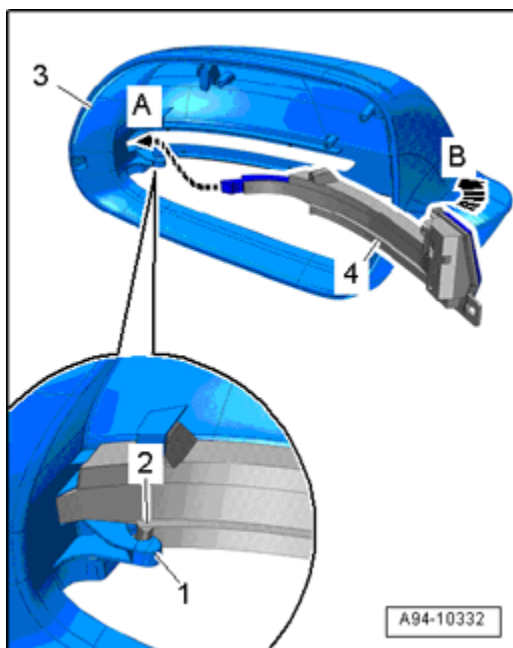

- Insert the tip of the turn signal in the slit in the exterior rearview mirror housing - **3** - - **arrow A** - .
- Tilt the turn signal bulb housing - **4** - into the exterior rearview mirror housing - **arrow B** - . The locking tab - **2** - must engage in the mount - **1** - .
- Attach mirror glass at mirror adjusting unit and press on mirror glass.

Note:

- ♦ *Make sure to press only in mirror center.*

Copyright © 2008 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: