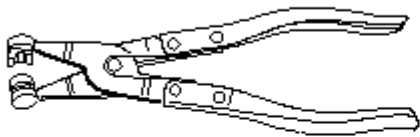
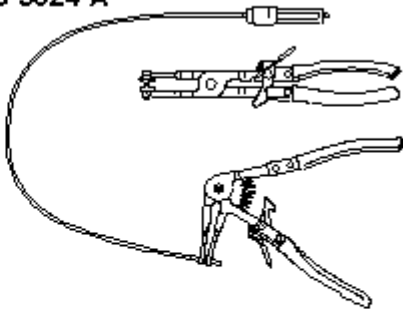
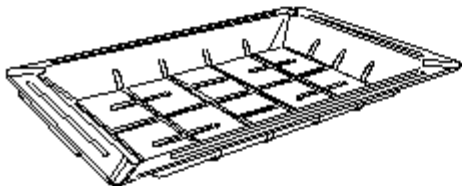


Removing, installing and checking thermostat

V.A.G 1921 	VAS 5024 A 
VAS 6208 	
	<div data-bbox="1007 1379 1145 1413" data-label="Text">G19-10011</div>

Special tools and workshop equipment required

- t Drip tray -V.A.G 1306-
- t Hose clip pliers -V.A.G 1921-
- t Spring type clip pliers -V.A.S 5024 A-

Removing

- Drain coolant → [Chapter](#).
- Remove toothed belt → [Chapter](#).
- Detach coolant hose from thermostat housing.

- Detach thermostat housing -arrows-.
- Remove O-ring and thermostat.


Installing



Note

Renew gaskets, seals and O-rings.

- Clean and smoothen sealing surface for O-ring.
- Install thermostat.

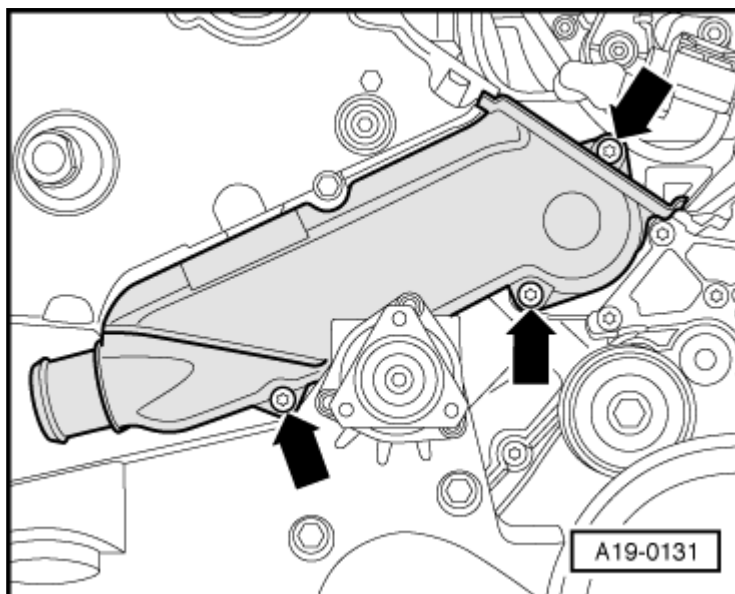

t Installation position: Vent valve - arrow- faces upwards.

- Install thermostat housing.

Perform further installation in reverse order, paying attention to the following:

- Install toothed belt (adjust valve timing) → [Chapter](#).
- Fill up with coolant → [Chapter](#).

Tightening torques

Tightening torques → [Chapter](#)

