

Audi A8

Fitting Locations

No. 801 / 1

Edition 09.2007

Earth points

Overview of earth points in engine compartment

1 - Earth point 2, on left in engine compartment - 640-

□ Location → [page 801/3](#)

2 - Earth point, on left in engine compartment - 12-


□ Location → [page 801/2](#)

3 - Earth point on left of radiator -706-

□ Location → [page 801/3](#)

4 - Earth point, on right in engine compartment - 13-

□ Location → [page 801/2](#)

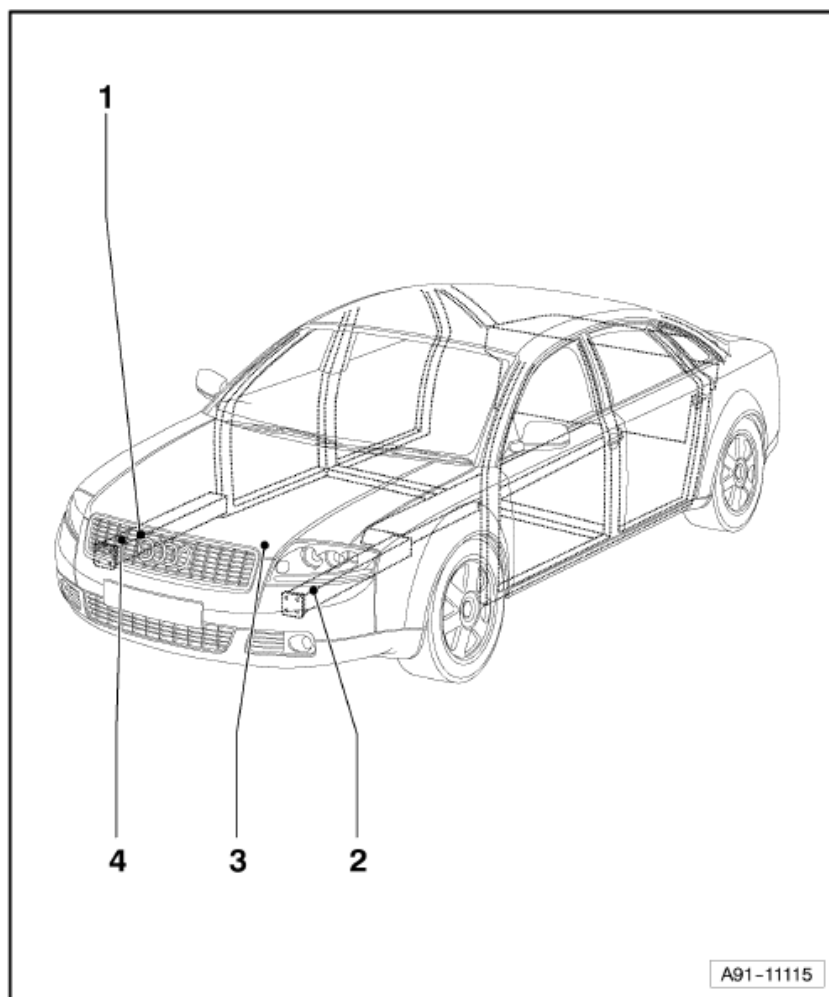


Audi A8

Fitting Locations

No. 801 / 2


12 Earth point 2, on left in engine compartment -arrow-

- ◆ on front of left longitudinal member before front axle
- ◆ Torque 20 Nm

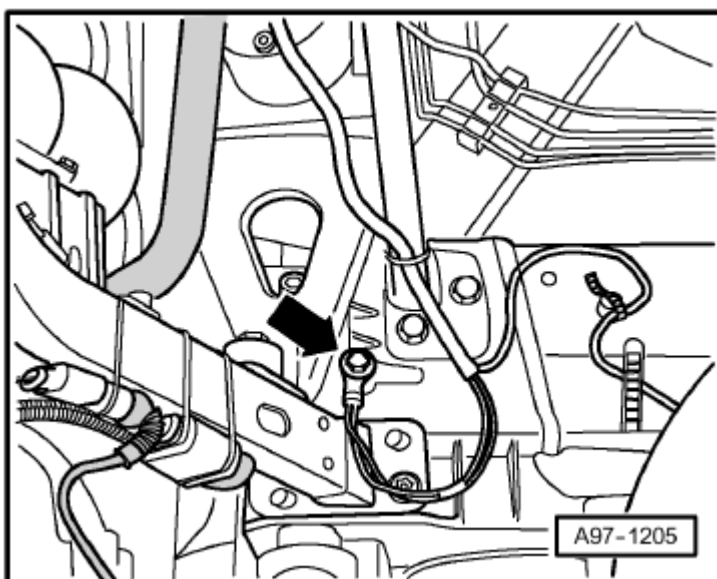

13 Earth point, in engine compartment, right -arrow-

- ◆ on front of right longitudinal member near front axle
- ◆ Torque 10 Nm

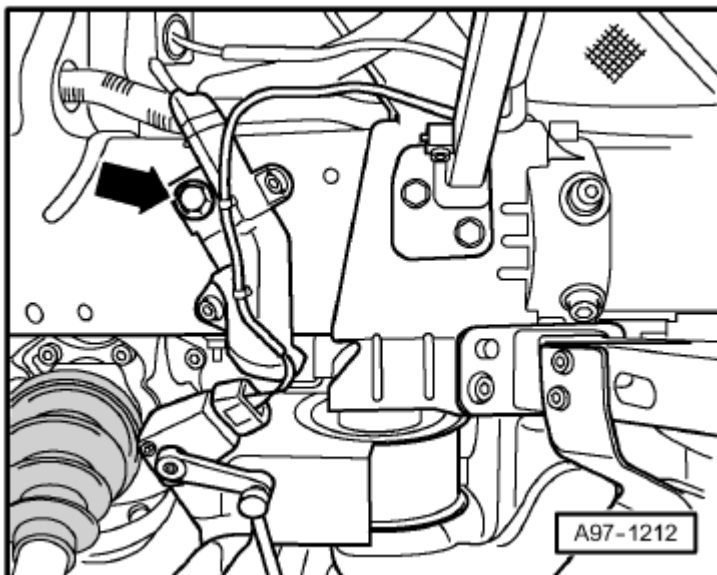


Audi A8

Fitting Locations

No. 801 / 3


640 Earth point, in engine compartment, left -arrow-

- ◆ on front of right lock carrier
- ◆ Torque 5 Nm

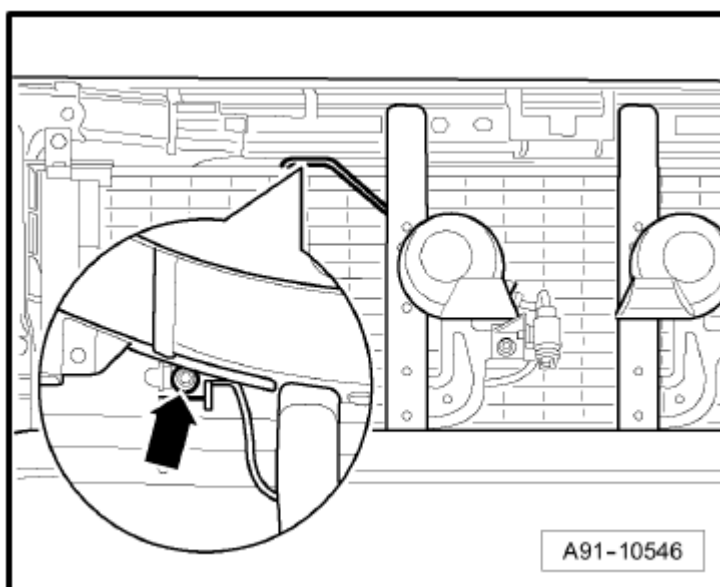

706 Earth point on left of radiator -arrow-

- ◆ on additional heat exchanger
- ◆ Torque 5 Nm

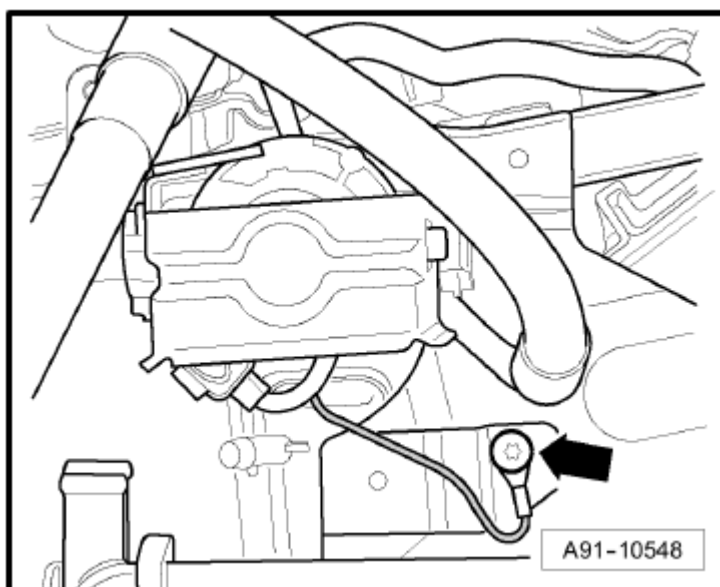


Audi A8

Fitting Locations

No. 801 / 4

Overview of earth points in vehicle interior

- 1 - Earth point, lower part of right A-pillar -43-**
 - ❑ Location → [page 801/6](#)
- 2 - Earth point, under front passenger seat -35-**
 - ❑ Location → [page 801/6](#)
- 3 - Earth point, right D-pillar -654-**
 - ❑ Location → [page 801/7](#)
- 4 - Earth point 1, on right near rear window -659-**
 - ❑ Location → [page 801/7](#)
- 5 - Earth point 2, on right in luggage compartment -675-**
 - ❑ Location → [page 801/8](#)
- 6 - Earth point, on right in luggage compartment -51-**
 - ❑ Location → [page 801/8](#)
- 7 - Earth point, on rear left of roof -667-**
 - ❑ Location → [page 801/9](#)
- 8 - Earth point 1, on left near rear window -657-**
 - ❑ Location → [page 801/9](#)

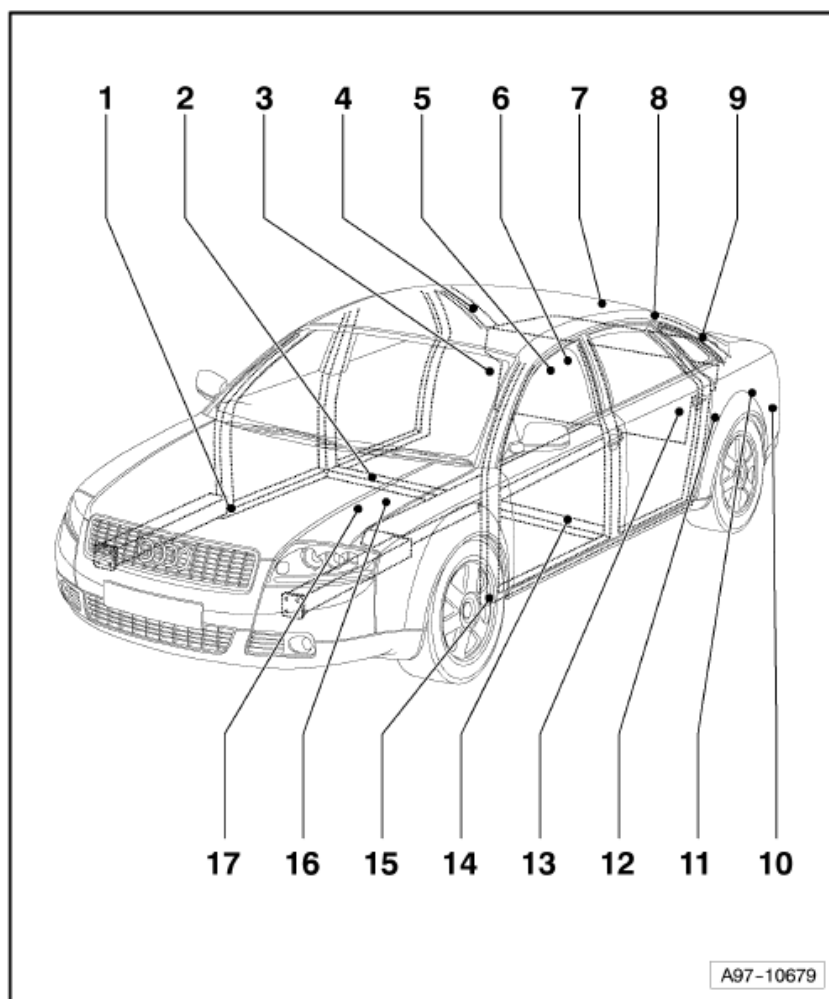

Audi A8

Fitting Locations

No. 801 / 5

9 - Earth point 2, on left near rear window -658-

- Location → [page 801/10](#)

10 - Earth point, on left in luggage compartment -50-

- Location → [page 801/10](#)

11 - Earth point (audio), on left in luggage compartment -613-

- Location → [page 801/11](#)

12 - Earth point 2, on left in luggage compartment -676-

- Location → [page 801/11](#)

13 - Earth point, left D-pillar -653-

- Location → [page 801/12](#)

14 - Earth point, under driver seat -34-

- Location → [page 801/12](#)

15 - Earth point, lower part of left A-pillar -44-


- Location → [page 801/13](#)

16 - Earth point, under the centre console near gear stick -606-

- Location → [page 801/13](#)

17 - Earth point (audio), under centre console, front -610-

- Location → [page 801/14](#)

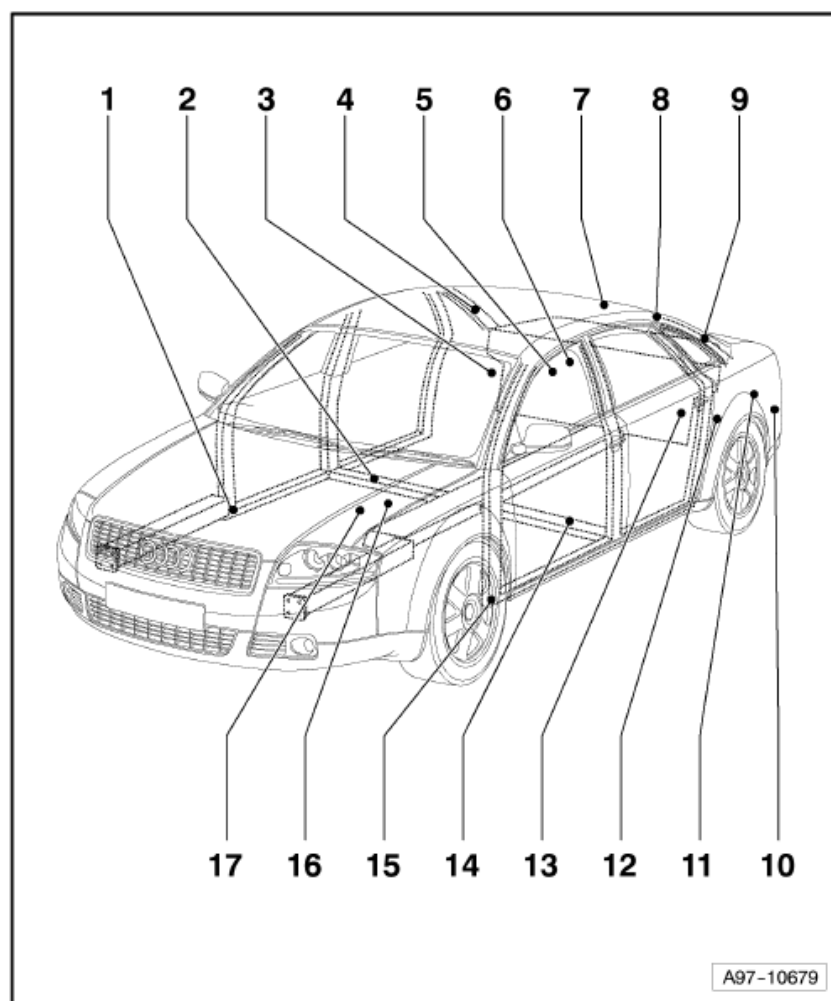


Audi A8

Fitting Locations

No. 801 / 6


43 Earth point, lower part of right A-pillar -arrow-

- ♦ on right A-pillar under carpet
- ♦ Torque 10 Nm

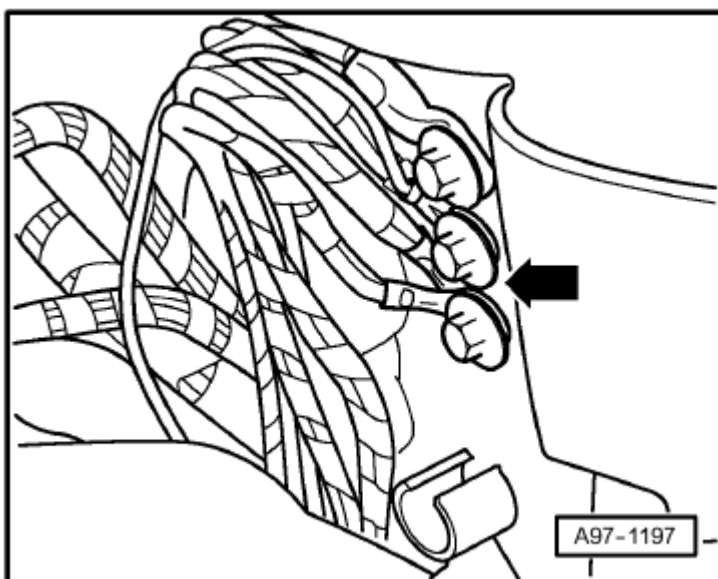

35 Earth point under front passenger seat -arrow-

- ♦ under front passenger seat
- ♦ Torque 10 Nm

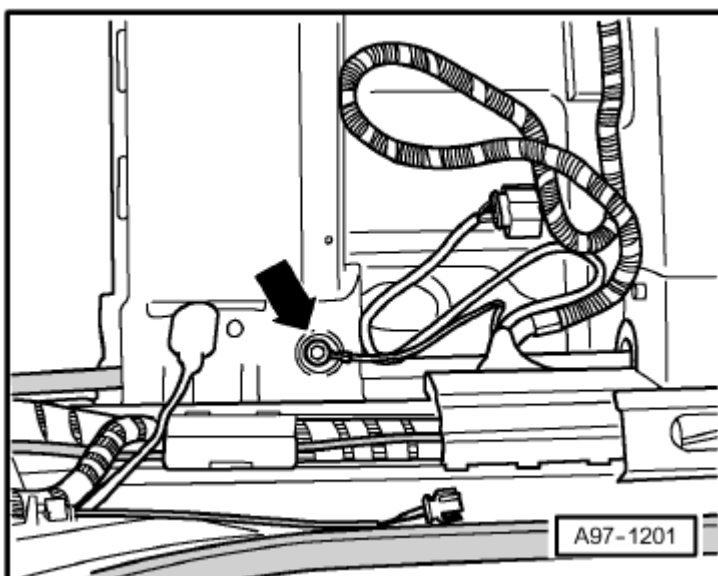


Audi A8

Fitting Locations

No. 801 / 7

654 Earth point, right D-pillar -arrow-

- ◆ behind the rear seat backrest, centre right
- ◆ Torque 10 Nm

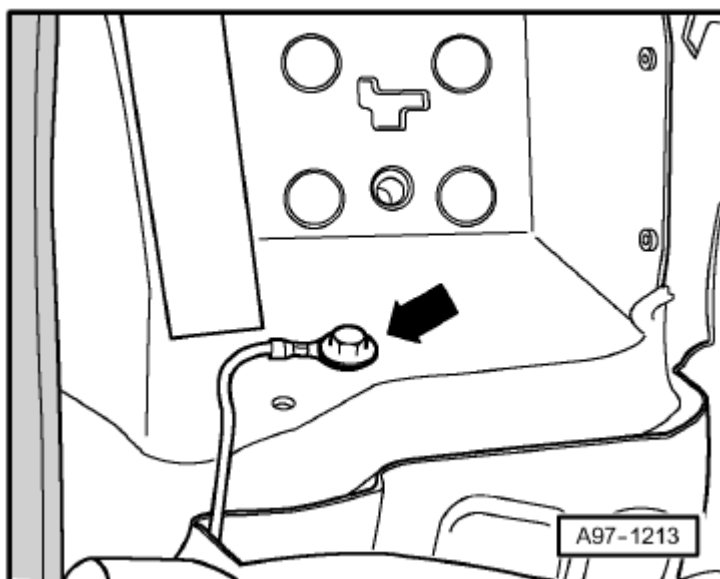

659 Earth point 1, on right near rear window -arrow-

- ◆ On D-pillar upper, above the rear shelf
- ◆ Torque 10 Nm




Audi A8

Fitting Locations

No. 801 / 8


675 Earth point 2, on right in luggage compartment -arrow-

- ♦ on centre right in luggage compartment under the trim in floor panel
- ♦ Torque 10 Nm

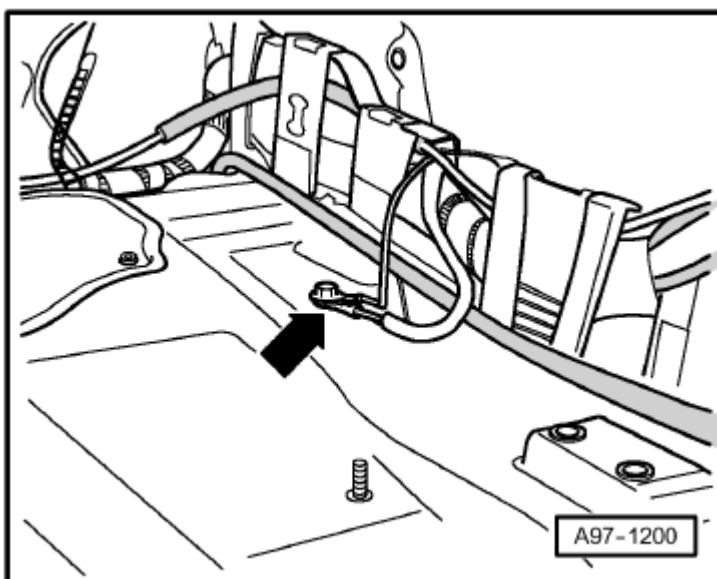

51 Earth point, on right in luggage compartment -arrow-

- ♦ rear right, behind the right luggage compartment side trim, next to battery
- ♦ Torque 10 Nm

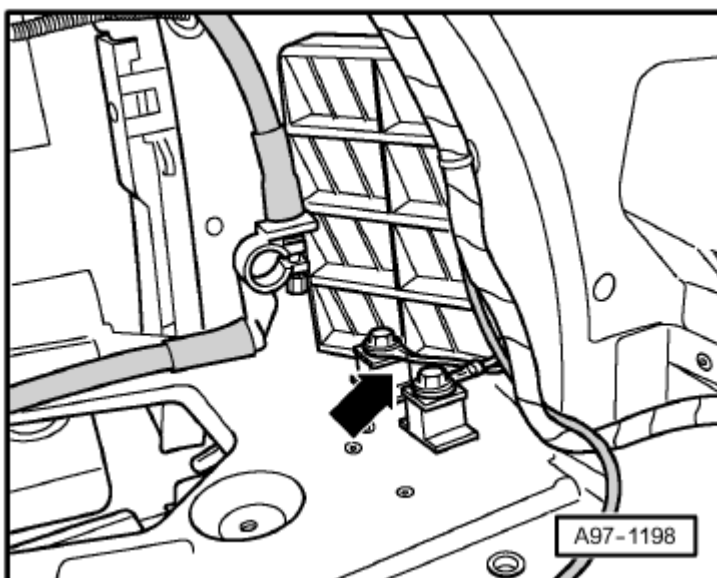


Audi A8

Fitting Locations


No. 801 / 9

Earth points, in interior

- 667 Earth point, on rear left of roof - arrow-
- ◆ Behind the border of roof's end, above aerial amplifier (diversity box)
 - ◆ Torque 10 Nm

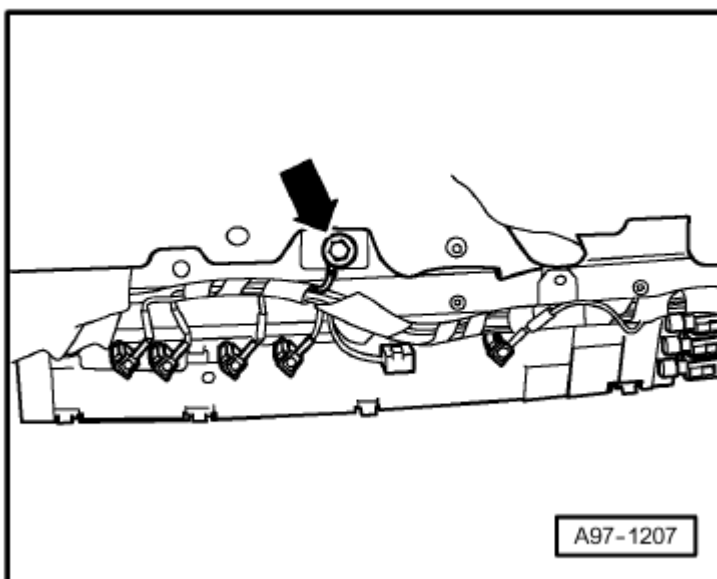

- 657 Earth point 1, on left near rear window -arrow-
- ◆ On upper left D-pillar, near rear window/roof
 - ◆ Torque 10 Nm

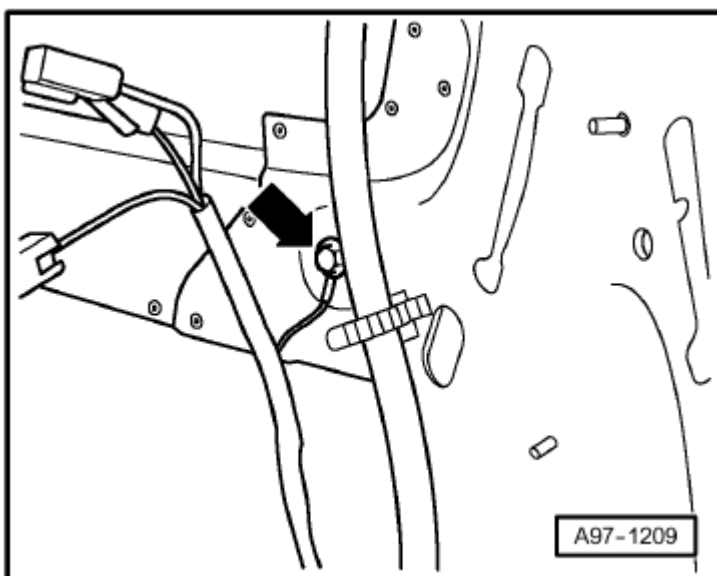


Audi A8

Fitting Locations

No. 801 / 10


658 Earth point 2, on left near rear window -arrow-

- ◆ On upper left D-pillar, above the rear shelf
- ◆ Torque 10 Nm

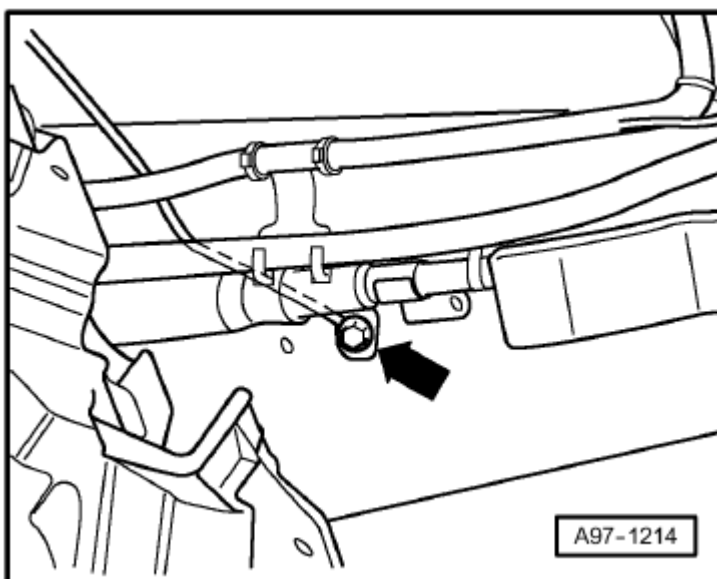

50 Earth point, on left in luggage compartment -arrow-

- ◆ Rear left, behind the left luggage compartment side trim, next to fuse carrier in left luggage compartment
- ◆ Torque 10 Nm

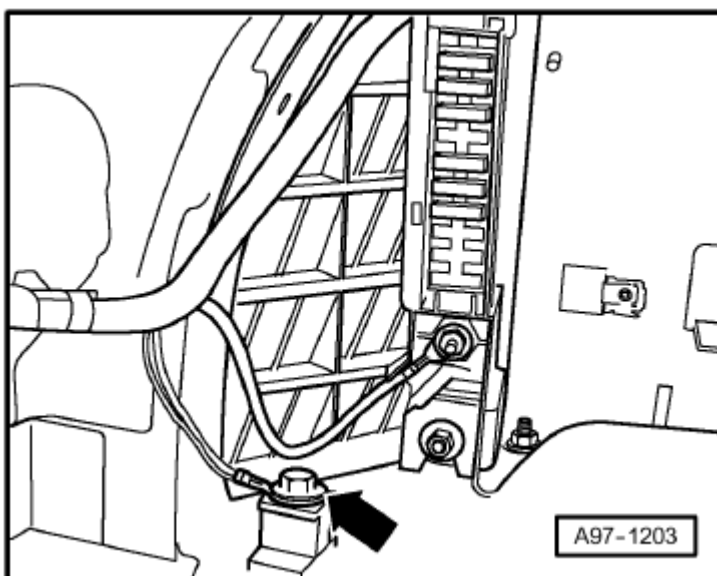


Audi A8

Fitting Locations

No. 801 / 11


613 Earth point (audio), on left in luggage compartment -arrow-

- ♦ Rear left, behind the left luggage compartment side trim, next to parking aid control unit
- ♦ Torque 10 Nm

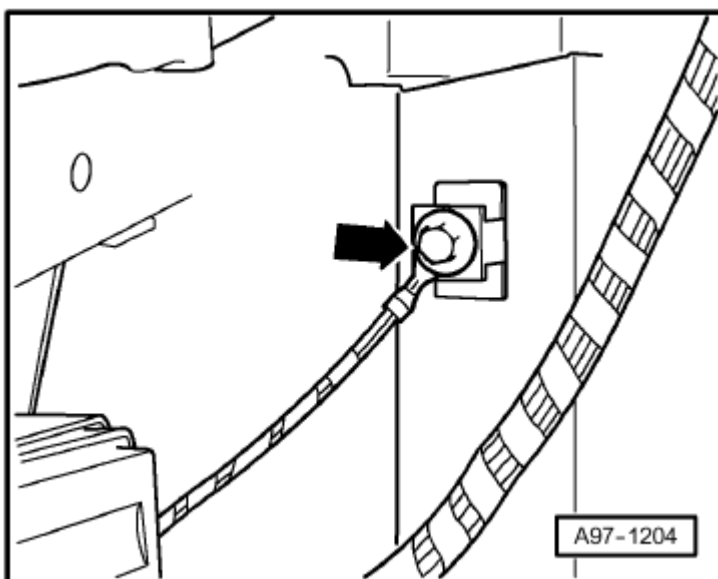

676 Earth point 2, on left in luggage compartment -arrow-

- ♦ On centre left in luggage compartment under the trim in floor panel
- ♦ Torque 10 Nm

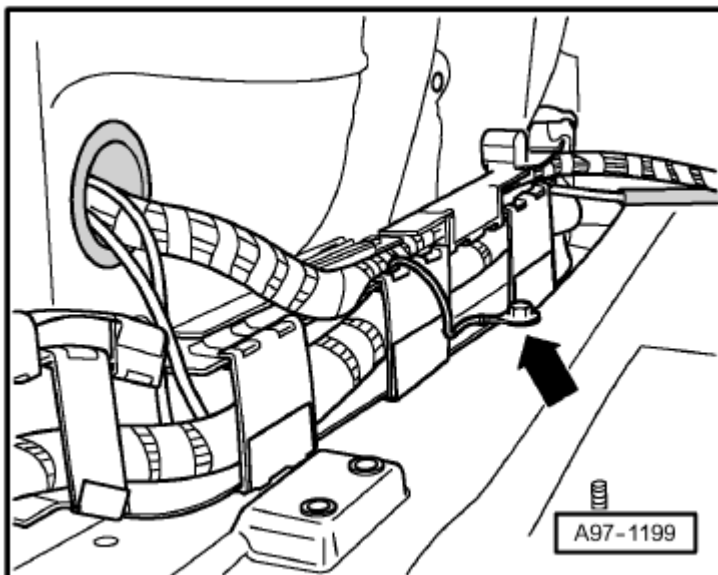


Audi A8

Fitting Locations

No. 801 / 12


653 Earth point, left D-pillar -arrow-

- ◆ in the rear seat backrest, centre left
- ◆ Torque 10 Nm

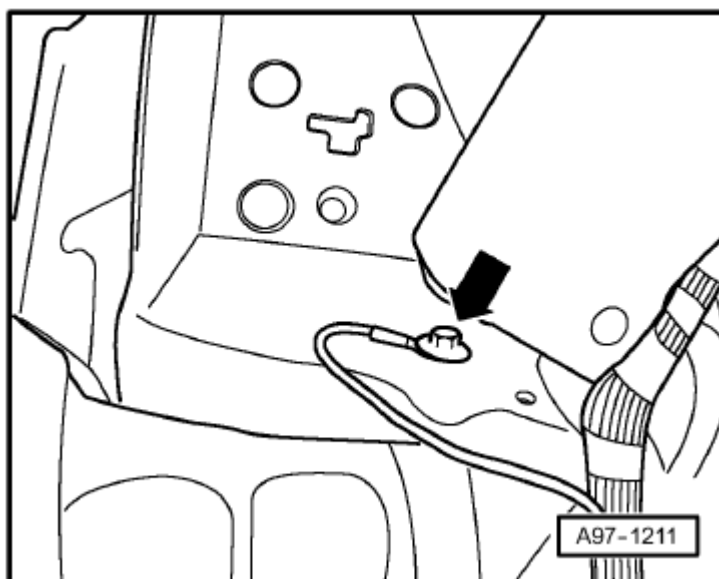

34 Earth point under driver seat -arrow-

- ◆ Under driver seat
- ◆ Torque 10 Nm

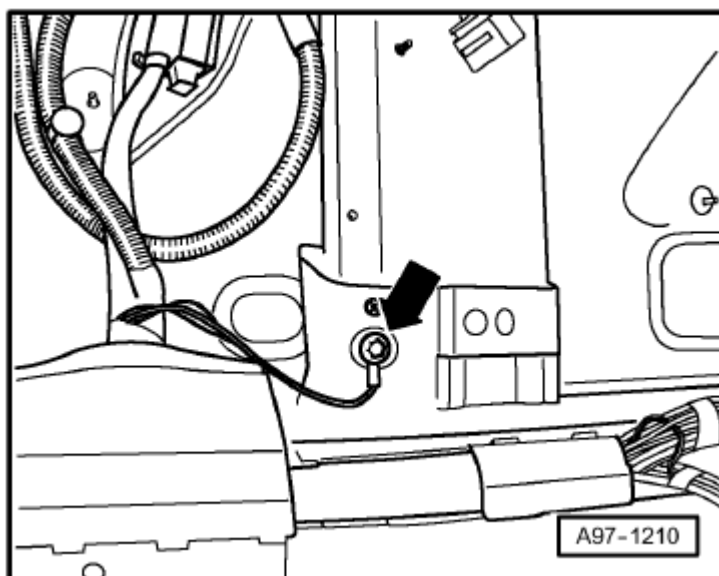


Audi A8

Fitting Locations

No. 801 / 13


44 Earth point, lower part of left A-pillar -arrow-

- ◆ On left A-pillar under carpet
- ◆ Torque 10 Nm

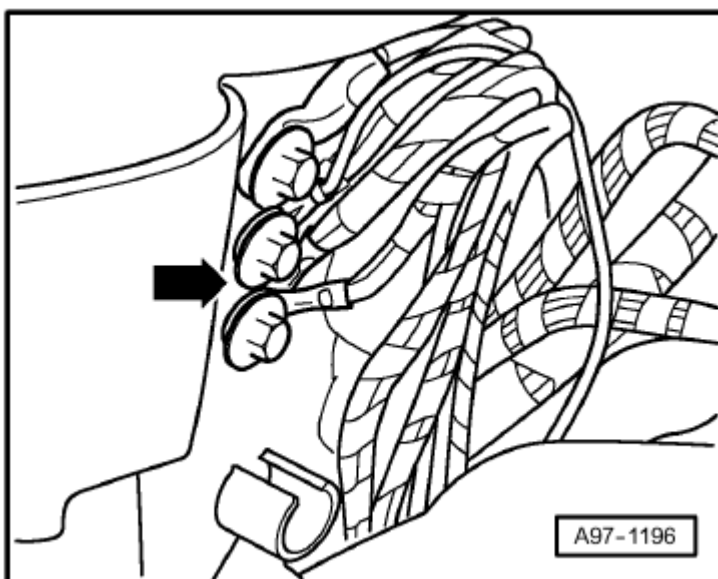

606 Earth point, under the centre console near gear stick -arrow-

- ◆ Near front passenger side airbag control unit, under carpet
- ◆ Torque 10 Nm

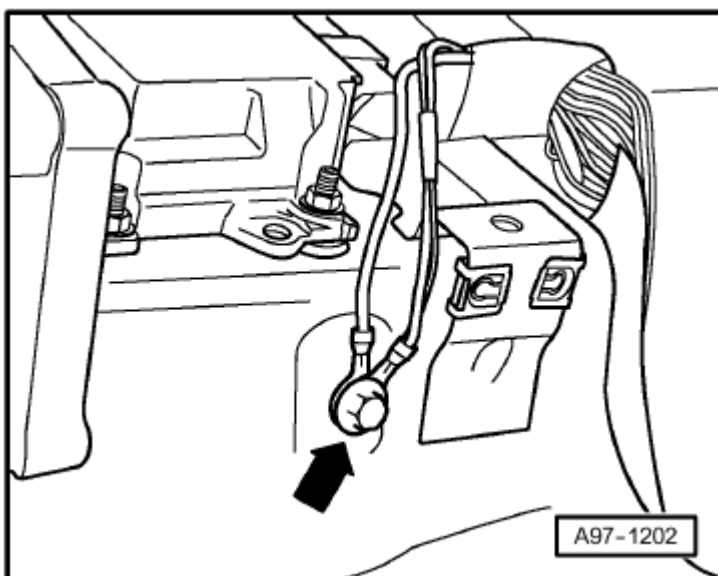

Audi A8

Fitting Locations

No. 801 / 14

610 Earth point (audio), under centre console, front -arrow-

- ◆ On centre tunnel before left selector mechanism
- ◆ Torque 10 Nm

