

- -> Install wires in the connector housing that is enclosed with replacement part.
- Contact 1 - Red wire
- Contact 2 - Brown/white wire
- Contact 3 - White wire

Note:



Arrow points towards chamfer on connector housing.

6 - Emblem

6.1 - Emblem

6.2 - Removing and installing Audi emblem

- Heat old emblem slightly with hot-air blower and carefully detach.

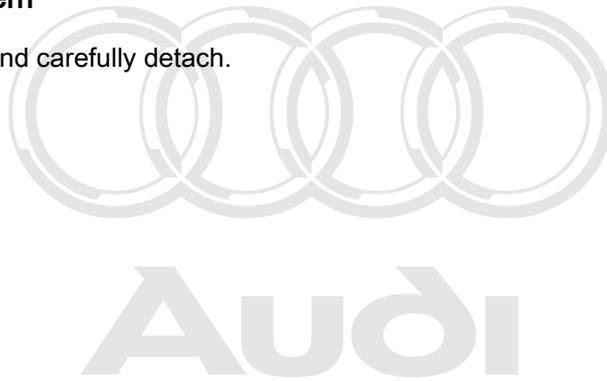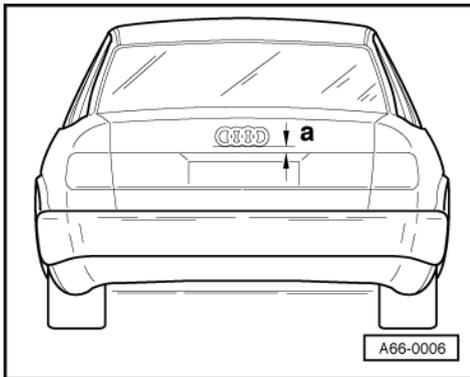

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- -> Clean bonding surface on body using a lint-free cloth and white spirit.
- Before gluing, mark dimension a and centre of boot lid.
 - Dimension a = 35 mm
- Heat Audi emblem to approx. 40 °C.
- Pull backing off adhesive surface of Audi emblem.
- Glue the emblem to the centre of boot lid at a distance -a- from edge of boot lid.