

Removing and installing radio-controlled clock receiver -J489-

Removing

- Remove rear bumper cover → [Rep. gr.63.](#)
- Unplug electrical connector -2- at radio-controlled clock receiver -J489--item 1-.
- Unscrew bolts -arrows- and detach radio-controlled clock receiver -J489-.


Installing

Installation is carried out in the reverse order; note the following:

- Install rear bumper cover → [Rep. gr.63.](#)

Vehicles with lane change assist:

Lane change assist control unit -J769-/-J770- must be recalibrated whenever bumper cover has been removed → [Chapter „Calibrating lane change assist - test equipment layout“.](#)

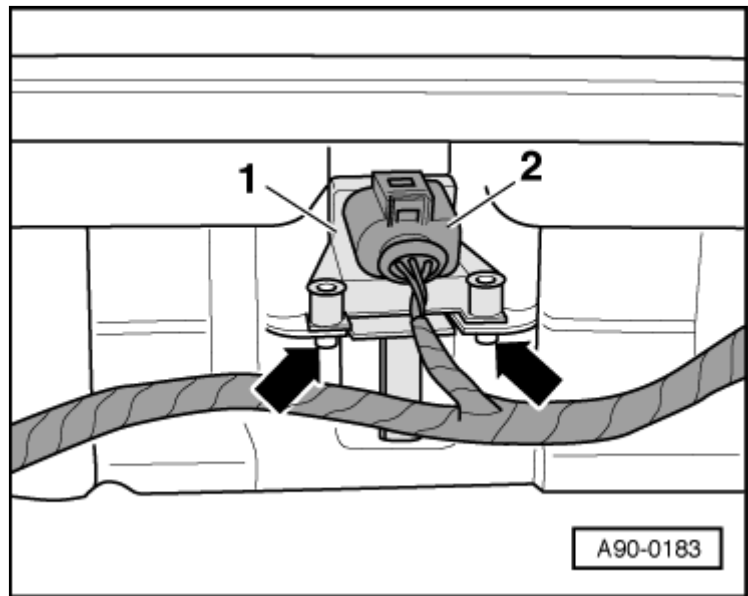

Tightening torque

Component	Nm
Radio-controlled clock receiver to bumper	2.5